



Use this guide to assist in the installation of the Western Filters, Fuel Manager Pre-Filter Kit. This kit will only fit the stated vehicle. Although these kits are aimed at DIY enthusiasts, we suggest the inexperienced organise a mechanic to carry out the installation.

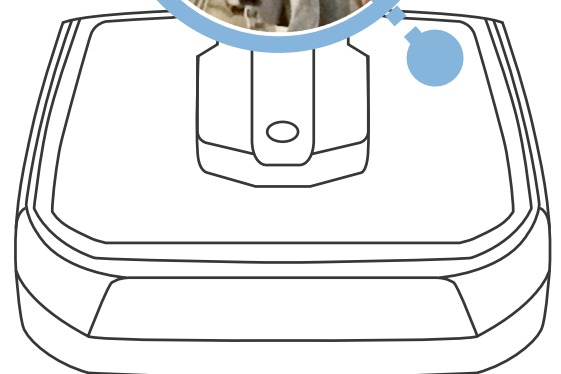
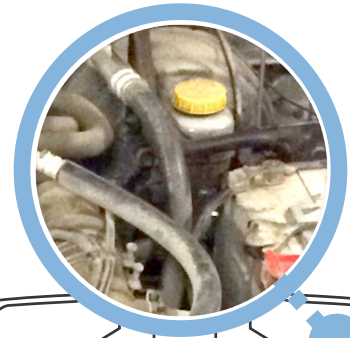
**BEFORE STARTING! PLEASE READ THIS IMPORTANT INFORMATION**

- Ensure the engine bay is clean and free from contaminants.
- The Fuel Manager unit has arrows which indicate flow located under the ports.
- Install all fittings & plugs into the filter assembly using a suitable thread paste such as Permalock Thread Sealant.

**\*\* Kit contents may change due to refinement or parts availability.**

**Fitting Instructions:**

1. The Vehicle Specific Bracket fits to the firewall side of the black bracket on the passenger side guard. The bracket mounts using the top clamp bolt for the air conditioner pipe, as well as two other holes in the bracket. On some applications, it may be required to drill new holes in the FM Bracket. Use the 6mm bolts and nyloc nuts to secure this bracket.
2. Mount the Fuel Manager (FM) unit assembly to the bracket.
3. Install all fittings and plugs into the filter assembly using a thread paste. Note the direction of flow in the head.
4. Remove the flexible fuel hose from the inlet side of the original filter and connect the hose (using the clamp supplied) to the FM unit.
5. Connect the outlet pipe of the FM unit filter to the inlet pipe of the original filter and use the clamps provided.
6. Pump the hand primer until it goes firm, the fuel system is now bled and the engine is ready to start.

**FM619DPK****FUELMANAGER<sup>®</sup>**  
**FITTING INSTRUCTIONS****FM619DPK Kit Contains:**

- 1x Fuel Manager 100 30 Micron Filter Assy
- 1x Vehicle Specific Bracket
- 1x Spare 30 Micron Filter
- 1x Fuel Line Rubber 10mm DFL10
- 1x 2xBolts 2xNuts 4xWashers
- 2x 1/4" NPT Straight 12mm
- 2x 1/4" NPT Plug DP733-04
- 2x Push-on 90° 12mm
- 2x Hose Clamp 10mm
- 1x Thread Sealant 6ml