



Use this guide to assist in the installation of the Western Filters, Fuel Manager Pre-Filter Kit. This kit will only fit the stated vehicle. Although these kits are aimed at DIY enthusiasts, we suggest the inexperienced organise a mechanic to carry out the installation.

Other Applications: Using ½" hose and fittings, this kit can be fitted to Toyota LandCruiser 200 & 70 Series.

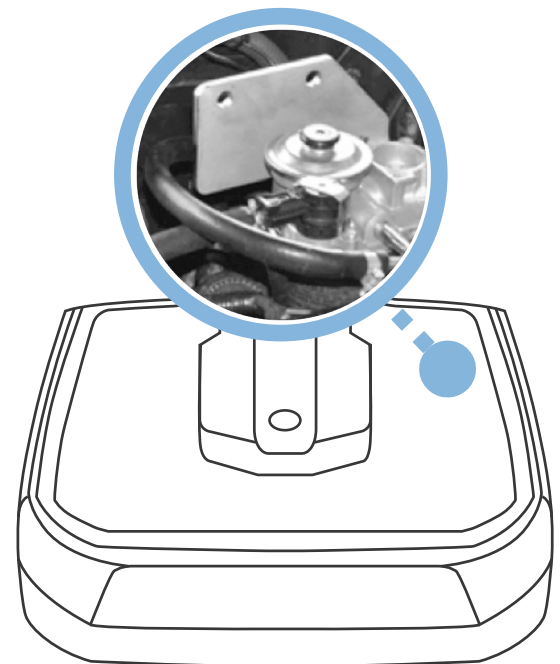
BEFORE STARTING: PLEASE READ THIS IMPORTANT INFORMATION

- Ensure the engine bay is clean and free from contaminants.
- The Fuel Manager unit has arrows which indicate flow located under the ports.
- Install all fittings & plugs into the filter assembly using a suitable thread paste such as Permalock Thread Sealant.

**** Kit contents may change due to refinement or parts availability.**

Fitting Instructions:

1. Remove Inlet Hose from the factory (OEM) filter.
2. Remove the 2x retaining nuts from Top of OEM filter.
3. Install the Kit Bracket on top of OEM filter housing and refit the retaining nuts.
4. Install all fittings and plugs into the filter assembly using thread paste.
5. Mount Fuel Manager Filter Assy on to bracket.
6. Connect the inlet side of the OEM filter to the outlet of the Fuel Manager Unit.
7. Fit the supply fuel line to the inlet of the FM Unit.
8. Reconnect Outlet Pipe from the OEM filter to the inlet of the common rail supply pump.
9. Ensure all fuel lines are suitably secured.
10. Prime the system using the hand primer on the OEM filter. When the primer goes firm, the engine is ready to start.

**FUEL MANAGER®**
FITTING INSTRUCTIONS**FM620DPK Kit Contains:**

- 1x Fuel Manager 30 micron Filtration Unit
- 1x Mounting Bolts, Washers and Nyloc Nuts
- 1x Spare 30 Micron Replacement Filter
- 1x 2mtr 3/8" Quality Fuel Hose
- 1x Vehicle Specific FM Bracket
- 3/8" Straight Barb Fittings
- Blanking Plugs
- Hose Clamps