


WESTERN FILTERS

Pre-Filter Fitting Instructions

Toyota Landcruiser 70 Series (2007-on) 4.5L V8 VDJ76/78/79 Turbo Diesel

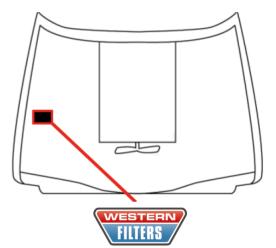



KIT CONTENTS

- 1. Fuel Manager 30 micron Filtration Unit
- 2. Mounting Bolts, Washers and Nyloc Nuts
- 3. 4mtr of 1/2" Quality Fuel Hose
- 4. Western Filters Provent Dual Bracket
- 5. 1/2" Straight Barb Fittings
- 6. Blanking Plugs
- 7. Hose Clamps
- 8. P-Clamps

IMPORTANT: Before Starting

- Ensure the engine bay is clean and free from contaminants.
- ☐ The Fuel Manager unit has arrows which indicate flow located under the ports.
- ☐ Install all fittings and plugs into the filter assembly using a suitable thread paste such as Permalock Thread Sealant.

Kit Part No: PROV-30PFB

INSTRUCTIONS

- 1. Remove inlet hoses from original filter.
- 2. Remove the three (3) retaining bolts holding the power steering reservoir on the drivers side mudguard (just behind the air box).
- 3. Slide the bracket under the reservoir.
- 4. Refit all three (3) bolts and retighten.
- Install all fittings and plugs into the filter assembly using suitable thread paste sealant such as Permalock Thread Sealant.
- 6. Run fuel line from the final Toyota filter to the outlet of the Fuel Manager unit.
- 7. Fit the supply fuel line to the inlet of the Fuel Manager.
- 8. Reconnect outlet pipe of the factory filter to the inlet of the cornmon rail supply pump.
- Ensure all fuel lines are suitably secured using ties or "P-Clamps".
- Prime the system using the hand primer on the factory filter. When the primer goes firm, the engine is ready to start.

P: (02) 9831-1715 | F: (02) 9671-2212 | E: enquiries@westernfilters.com.au | W: www.westernfilters.net.au 45 Forge St, Blacktown NSW 2148 | Mon-Fri: 7:00am – 5pm / Sat: 7:00am – 12pm













