


Ford Ranger 2011-15 Everest 2017-22 Mazda BT50 2015-20 3.2L 2.2L

OS-20-23-DON

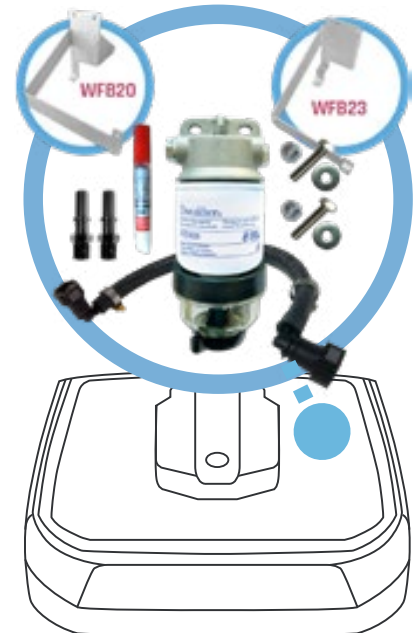





20-23-DON



Install Guide for Western Filters Pre-Filter Bracket Kit.

CAUTION: ** Ensure the engine is OFF & COOL before installation ! **

- 1: Locate the Install Area:** On the Passenger's side of engine bay, near firewall.
- 2: Prepare the Filter Head:** Remove pre-installed plugs (gold), add sealant, return as displayed. Add crush washers to adaptors, add sealant, screw into filter head.
- 3: Head Assy Configuration:** Add Hose End fittings into head adaptors.
- 4: Mount the Bracket:** Use the existing Factory Fittings within the engine bay.
**** DO NOT REMOVE EXISTING Air/Con NUT ! ****
- 5: Install the Pre-Filter:** Fit the filter head to Bracket. Pre-fill the Donaldson filter element with clean diesel. Screw filter element with bowl attached, into bracket mounted head.
- 6: Disconnect the Factory Fuel Line from Fuel Outlet:**
Remove the end of the Fuel Line connected to the Fuel Outlet (displayed in magenta).
- 7: Connect the Factory Fuel Line to the Pre-Filter:** (displayed in magenta).
- 8: Connect Kit Hose from Pre-Filter Outlet to Factory Filter:** (displayed in blue).
- 9: Priming the System:** Loosen Bleed nut and using the Primer on the factory filter prime the system until bubbles appear at the bleed nut and then re-tighten.

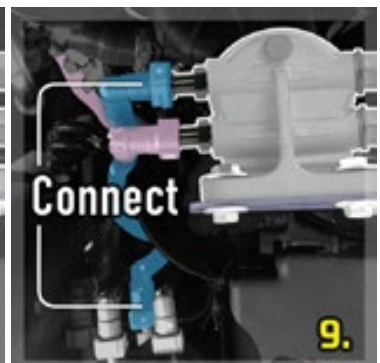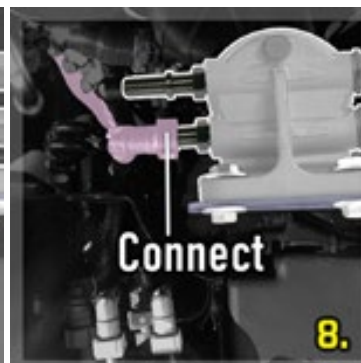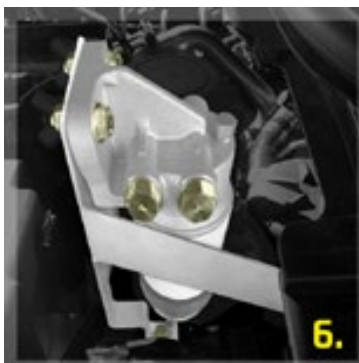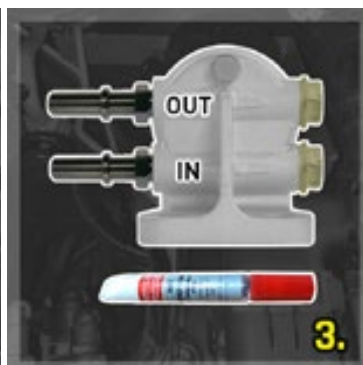

45-47 Forge St, Blacktown NSW 2148 | MON to FRI: 7:30am-5:00pm | SAT: 7:30am-12:00pm

Follow us on



westernfilters1

OS-20-23-DON