

Provent Kit for TOYOTA Hilux 2013-15 3.0L Turbo Diesel D4-D KUN16/26 (With ABS or VSC)

KIT No: OS-PROV-OI



Mann Provent 200 Catch Can Kit Install Guide

- STEP 1:** Ensure Engine is OFF - and cool enough to work on.
- STEP 2:** Identify the Install Area / Remove Engine Cover
Unscrew the 5x nuts retaining the intercooler cover and remove
- STEP 3:** Identify OEM Steel Breather Pipe and remove
Locate breather pipe under intercooler on driver's side of engine block. Remove bolt with 12mm socket and remove from vehicle.
- STEP 4:** Shorten OEM Steel Breather Pipe
Cut off the welded bracket of the breather pipe (approx. 30mm from pipe bend).
Discard the off cut (section with welded bracket).
- STEP 5:** Insert Breather Pipe in to Supplied 90° Hose
Swivel into position. Return 'Ribbed End' of pipe in to rubber fitting.




STEP 2:



STEP 3:



STEP 4:

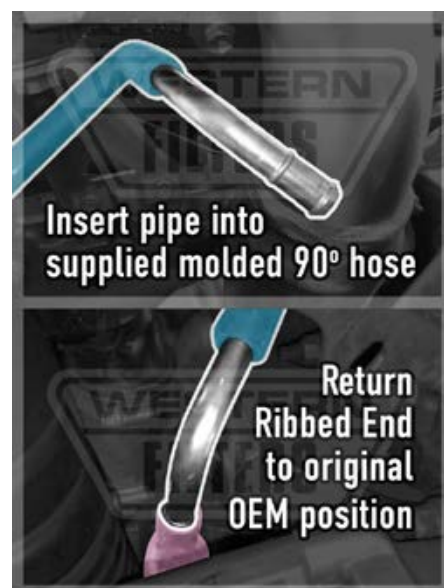

STEP 5:

Provent Kit for TOYOTA Hilux 2013-15 3.0L Turbo Diesel D4-D KUN16/26 (With ABS or VSC)

KIT No: OS-PROV-OI

STEP 6: Rotate Provent Inlet in to correct position

Fit Drain Hose to Base of Provent - secure with hose clamp, feed hose down through engine bay (*ensure Tap is in OFF position).

STEP 7: Fit Provent to Bracket - required bolts, nuts & washers supplied.

Fit Bracket Over ABS Bolts. Remove bolts holding ABS unit, place bracket over bolts, return nuts.

STEP 8: Provent Lower Outlet to Air Intake

:: Use the flanged end of 90° hose (with steel pipe)

:: Attach to Provent's Lower Outlet (from Air Intake)

:: Secure with hose clamps.

STEP 9: Provent Top Inlet to Crank Case

:: Attach flanged end of straight hose to Provent's Top Inlet

:: Attach other end to the OEM hose from the Crank Case Outlet

:: Secure with supplied hose clamps.

STEP 10: Cable tie hoses to avoid rubbing where necessary.

STEP 11: Replace the plastic engine cover. Job done !

View Install Slide Presentation: [SCAN QR-CODE \(page.1\)](#)



STEP 6:



STEP 7:



STEP 8:



STEP 9: