

www.westernfilters.net.au | enquiries@westernfilters.com.au

**MANN** 

Provent Oil Catch Can Kit for Mitsubishi Triton ML MN & Challengers 2.5L DI-D 4D56 CDR

KIT No: OS-PROV-05-4x4



## Mann Provent 200 Catch Can Kit Install Guide

**STEP I:** Switch Off Engine. Remove the keys from the ignition and ensure the engine is cool enough to work in the engine bay.

**STEP 2:** Remove the Engine Cover.

**STEP 3:** Adjust Provent Inlets to displayed position. Fit Drain Hose to the base of the Provent 200. Tighten hose clamp.

**STEP 4**: Fit Provent to Bracket. Identify bolt holes, then Secure the Bracket.


**STEP 5**: Feed the Drain Hose down between the inner guard and chassis rail. Within the wheel arch, Attach ball valve TAP and secure with supplied clamp. Ensure Hose Tap is CLOSED.



STEP 2:



**Use Existing Holes** \*Fit Provent first to Bracket Before Securing STEP 4:

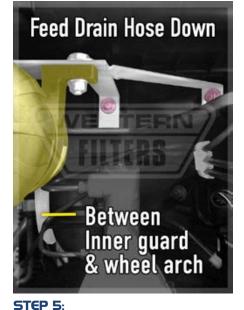

STEP 3:

45-47 Forge St, Blacktown. NSW 2148 | MON to FRI: 7:30am-5:00pm | SAT: 7:30am-12:00pm













MANN-

T: [02] 9831 1715

www.westernfilters.net.au | enquiries@westernfilters.com.au

Provent Oil Catch Can Kit for Mitsubishi Triton ML MN & Challengers 2.5L DI-D 4D56 CDR

KIT No: OS-PROV-05-4x4



**STEP 6**: Detach and remove the OEM Breather Hose from between the Top of the Crankcase and the engine Air Inlet.

**STEP 7:** Connect the supplied molded 'double-bend' hose to the Provent Lower Outlet, then twist into position to connect to the Air Inlet. Secure all hoses with supplied clamps.


**STEP 8:** Attach the short end of the supplied 'straighter J-hose' to the Provent Top Inlet. Attach the other 16mm end to the Crank Case Outlet.

**STEP 9:** Secure with clamps. Return the Engine Cover.

View Install Slide Presentation: SCAN QR-CODE on banner >



STEP 6:

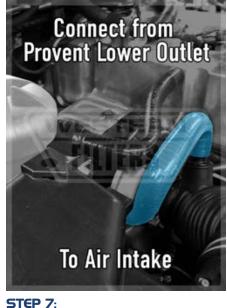

Connect from Provent Top Inlet To Crankcase Outlet



STEP 8:

STEP 9:

45-47 Forge St, Blacktown. NSW 2148 | MON to FRI: 7:30am-5:00pm | SAT: 7:30am-12:00pm

