

Provent Kit for Mazda BT50 XT & Ford Ranger PX (from 2011) TDCi 2.2L 3.2L Turbo Diesel

**KIT No: OS-PROV-06 [WILL NOT FIT ! when Fuel Manager already installed]**



## Mann Provent 200 Catch Can Kit Install Guide

**STEP 1:** Switch off engine, remove the keys from the ignition  
Ensure the engine is cool enough to work in the engine bay.

**STEP 2:** Locate install area passenger side of engine bay.  
Remove plastic engine cover.

**STEP 3:** Adjust the Provent unit in it's bracket, 2 positions anti-clockwise.  
Attach the Drain Hose to the Bottom Outlet - Secure with supplied clamp.

**STEP 4:** Mount the Provent unit to the Vehicle Specific Bracket

**STEP 5:** Identify the bolt hole to attach the Kit Bracket to - located behind the Fuel Filter. Mount the bracket to the vehicle. Run the Drain Hose down between the inner guard & chassis rail. Attach Ball Valve Tap & clamp.

\*\*\* ENSURE DRAIN TAP IS OFF POSITION \*\*\*




**STEP 2:**



**STEP 3:**



**STEP 4:**

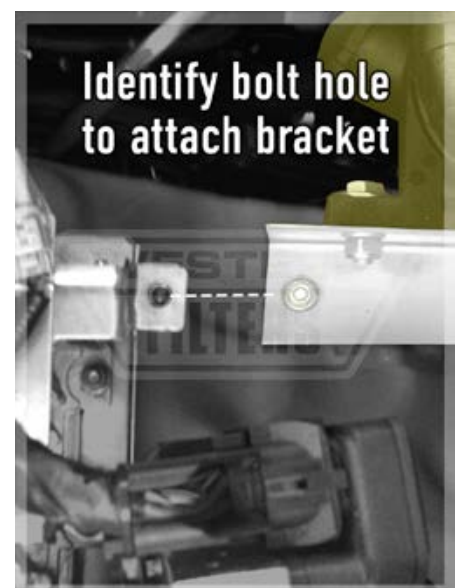

**STEP 5:**

Provent Kit for Mazda BT50 XT & Ford Ranger PX (from 2011) TDCi 2.2L 3.2L Turbo Diesel

**KIT No: OS-PROV-06 [WILL NOT FIT ! when Fuel Manager already installed]**



**STEP 6:** Disconnect Breather Hose from the Top of the Crankcase, leaving the other end still connected to the Air Inlet (img.5).


**STEP 7:** Lower Hose (longer): Using the Longest Hose, connect the 90° Degree Connector in to the factory Breather Hose, run hose around rear of engine and connect the other end to the Provent Lower Outlet. Tighten all hoses with supplied clamps. (img.6).

**STEP 8:** Top Hose (short): Swivel the Crankcase Outlet towards the rear of the vehicle. Using the Shorter Hose connect the 22mm end to the Crankcase Outlet. Then lay the hose around the back of the engine, over the Lower Hose and connect to the Provent Top Inlet.


**STEP 9:** Cable tie all hoses where necessary to reduce rubbing.

**STEP 10:** Provent installed. Now re-fit the Plastic Engine Cover and job done!

View Install Slide Presentation: [SCAN QR-CODE \(page.1\) >](#)

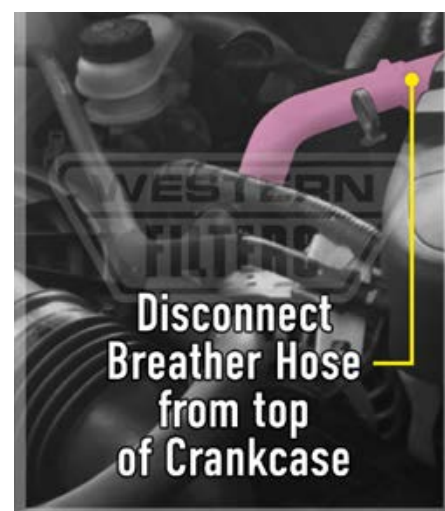


**STEP 6:**

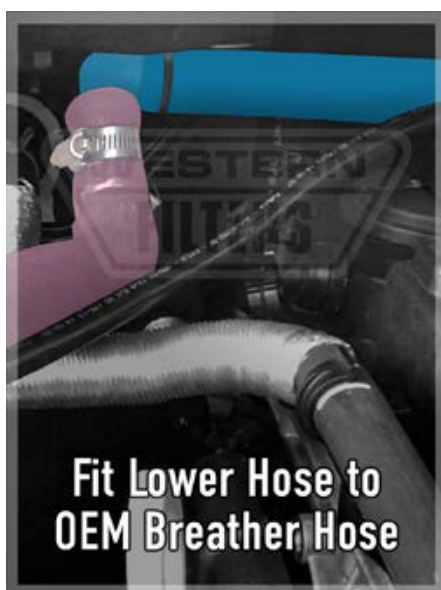

**STEP 7:**



**STEP 8:**

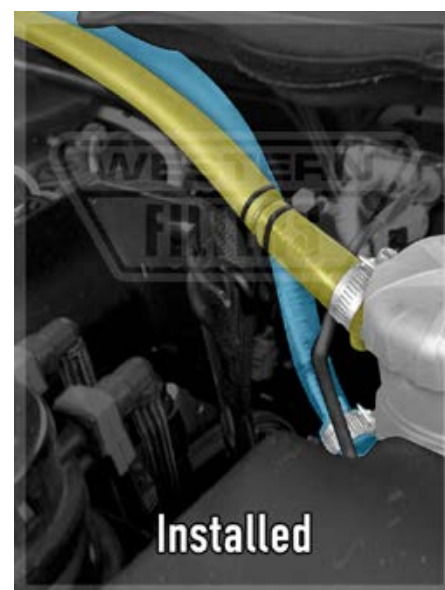

**STEP 9:**