

TOYOTA LC Prado 2015-Aug2020 2.8L Turbo Diesel GDJ150R 1GD-FTV

OS-PROV-13



MANN Provent 200 IV Oil Catch Can Kit Install Guide

CAUTION: ** Ensure the engine is OFF & COOL before installation ! **

STEP 1: Identify the Install Area - driver's side of engine bay.

STEP 2: Replace the OEM Bracket with supplied Provent Bracket

STEP 3: Rotate Provent Inlet in to correct position
Bolt Provent on to supplied WF Bracket
Secure with hose clamp.

STEP 4: Fit Drain Hose / Feed down through eng.bay
Cut to length and secure with clamps. **** Ensure Tap is OFF ! ****



STEP 1:



STEP 2:



STEP 3:



STEP 4:

TOYOTA LC Prado 2015-Aug2020 2.8L Turbo Diesel GDJ150R 1GD-FTV

OS-PROV-13

STEP 6: Identify OEM Breather Hose connected to Crankcase .
On driver's side of engine block, disconnect & swivel rubber fitting 180°.

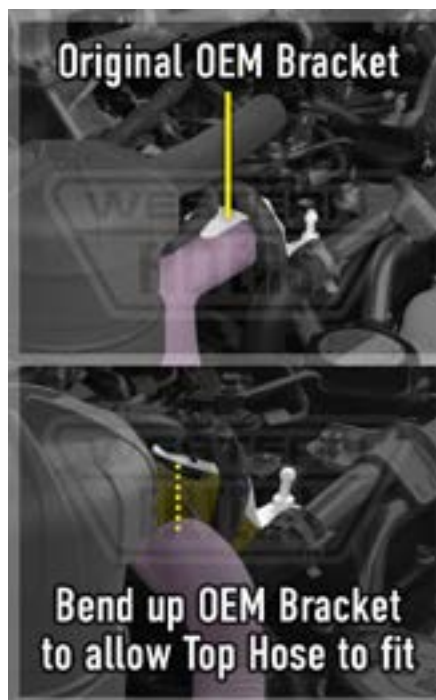
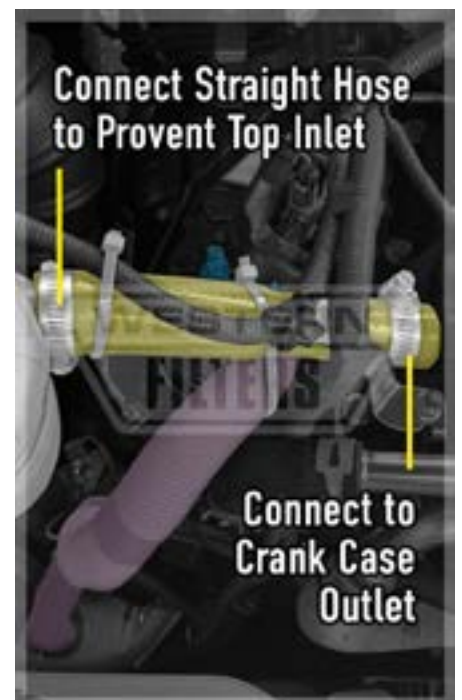
STEP 7: Provent Lower Outlet to Breather Hose.
- Attach flanged-end of hose to Provent's Lower Outlet.
- Using the supplied 16mm Plastic 90° Joiner, connect the Lower Hose to OEM Breather Hose rubber fitting (to Air Intake)
- Secure with clamps.

STEP 8: Bend UP OEM Bracket
- Identify the OEM Bracket above the Breather Hose
- Bend UP to allow the Top Hose to sit beneath the OEM Bracket

STEP 9: Provent Top Inlet to Crank Case
- Attach supplied straight hose to Provent's Top Inlet
- Attach other end to the Crank Case Outlet
- Secure with supplied hose clamps
- Cable-tie Hoses to avoid rubbing where necessary

STEP 10: Replace the plastic engine cover. Job done !

[View Install Slide Presentation: SCAN QR-CODE \(page.1\) >](#)

**STEP 6:****STEP 7:****STEP 8:****STEP 9:**