



MANN Provent 200 IV Oil Catch Can Kit Install Guide

CAUTION: ** Ensure engine is OFF. DPF Exhaust System MAY BE HOT !


STEP 1: Locate the Install Area. Remove the engine cover (displayed in pink).

STEP 2: Remove factory Breather Pipe and Air Box.

STEP 3: Secure Bracket using the existing mounts with supplied fittings. Then bolt the Bracket and Strut together ensuring the horizontal bracket is level.

STEP 4: Unclip the Provent plastic sleeve and Rotate Ports in to position. Secure sleeve. Clamp Drain Hose on to the base of Provent.

WARNING: DPF SYSTEM BECOMES EXTREMELY HOT

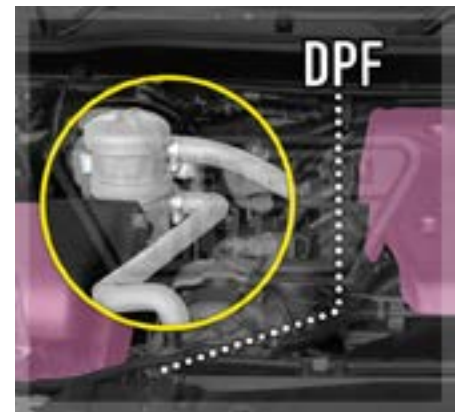

STEP 1:



STEP 2:



STEP 3:



STEP 4:

MITSUBISHI Triton 2015-2021 MQ MR 2.4L / Pajero Sports QE 4N15

OS-PROV-14

- STEP 5:** Feed Drain Hose down through Engine Bay in to Wheel Arch.
Trim Drain Hose to the required length. Secure with supplied P-clamp. Ensure Tap Is CLOSED !
- STEP 6:** Fit Provent to Bracket with supplied fittings.
- STEP 7:** Connect supplied S-shaped Hose to Provent's Lower Outlet.
Run along air box and fit to Air Intake just before the turbo
- STEP 8:** Connect Straight Hose to Provent's Top Inlet, bending the hose, connect to the Crankcase Outlet
- STEP 9:** Manipulate the hoses so there are no kinks and tighten supplied hose clamps.
Check that all clamps and nuts have been tightened, use cable ties for suport if necessary.
Return the Air Box and Engine Cover. Congratulations - You're done !!


View Install Slide Presentation: [SCAN QR-CODE \(page.1\) >](#)




STEP 5:




STEP 6:

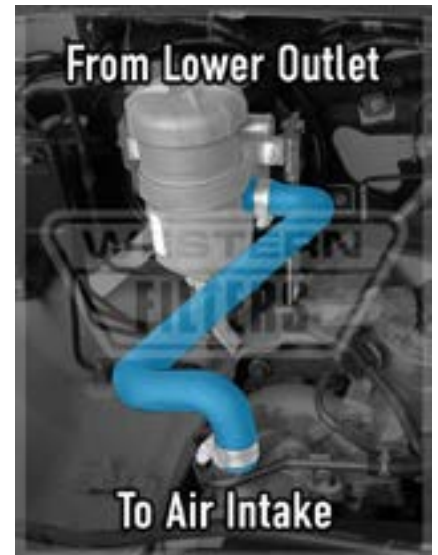

STEP 7:

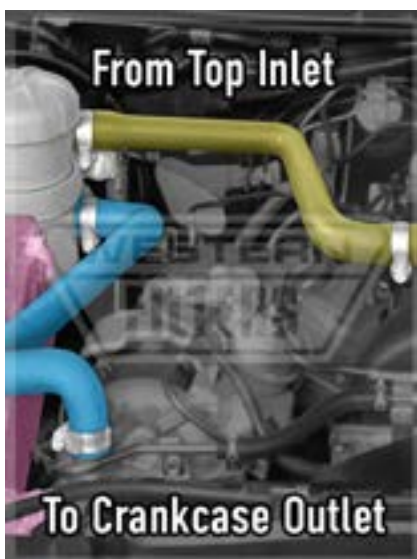

STEP 8:

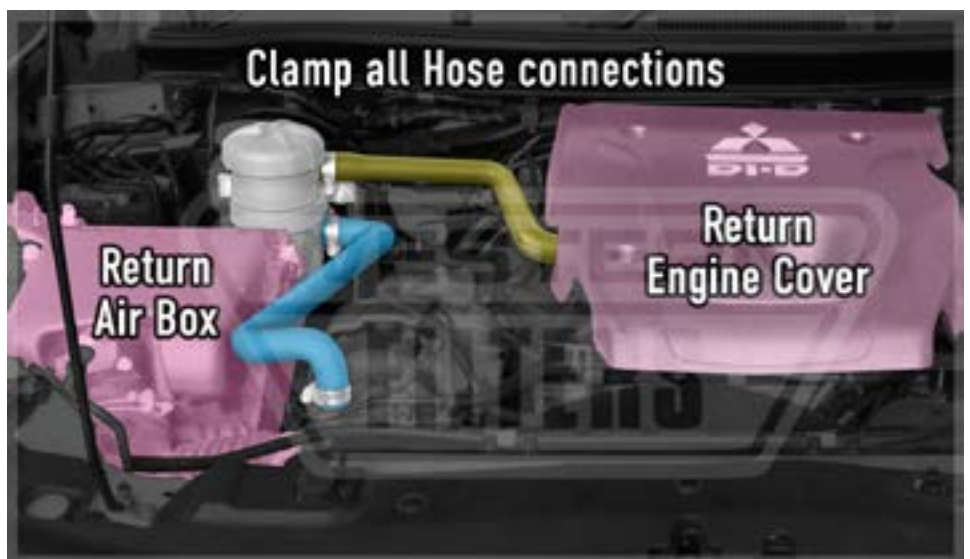

STEP 9: