

Provent Kit for Ford Ranger PX2 PX3 3.2L Turbo Diesel (sep2015) TDCi 5Cyl P4AT DI DOHC

**KIT No: OS-PROV-15**



## Mann Provent 200 Catch Can Kit Install Guide

**STEP 1:** Ensure engine is OFF and cool !

- Take care while working close to the DPF (Diesel Particulate Filter)
- Remove Engine cover. Lifting UP to un-clip.

**STEP 2:** Remove OEM Hose from between the Crank Case to the Air Intake.

**STEP 3:** Swivel the Provent 200 ports in to the correct position.

- Attach Drain Hose to base of the Provent unit.

**STEP 4:** Feed Drain Hose down through wheel arch

- Trim clear hose to suit, Cable tie inner guard.
- Ensure Drain Tap is CLOSED.

**STEP 5:** Attach the Provent 200 to the supplied Bracket.



**STEP 2:**



**STEP 3:**



**STEP 4:**



**STEP 5:**

Provent Kit for Ford Ranger PX2 PX3 3.2L Turbo Diesel (sep2015) TDCi 5Cyl P4AT DI DOHC

### KIT No: OS-PROV-15

**STEP 6:** Fit Provent 200 with Bracket on to the front radiator support.

**STEP 7:** Connect the short 'S-Type Hose' to the Provent Lower Outlet. Secure with clamp.

**STEP 8:** Connect the longer molded hose from the Provent Top Inlet.

**STEP 9:** Connect the other end to the Crank Case Outlet. Secure with clamps. Cable tie where required.

**STEP 10:** Double check to ensure all bolts, clamps and cable ties are secure, then return the engine cover.

**STEP 11:** Congratulations job done !

You have made a great decision in fitting the worlds best Oil Catch Can Kit available !  
Replace filter approx. 40,000kms. Drain oil once a month !


View Install Slide Presentation: [SCAN QR-CODE \(page.1\) >](#)




**STEP 6:**




**STEP 7:**

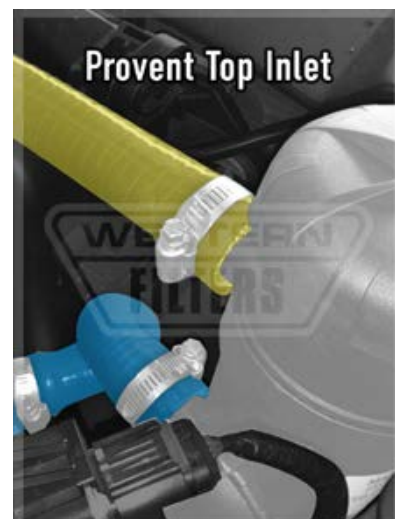

**STEP 8:**

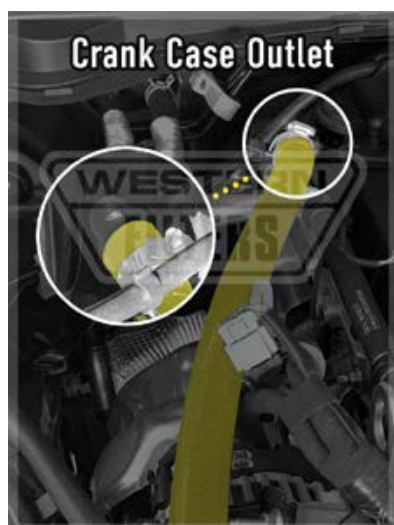

**STEP 9:**

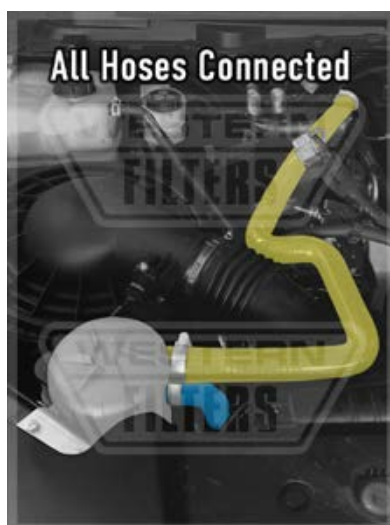

**STEP 10:**



**STEP 11:**