

T: (02) 9831 1715

FILTERS, FILTER CLEANING & MORE

Provent Kit for Nissan Navara 2.3L ST NP300 2015-on 4x4 D23 YD23 DOHC Di I6V


KIT No: OS-PROV-I7




Mann Provent 200 Catch Can Kit Install Guide

NOTE: There is a Single Turbo version requiring a longer Top Hose (10cm). Please notify us if your vehicle has a Single Turbo version !

- **STEP I:** Ensure engine is off and cool. Remove plastic engine cover.
- **STEP 2:** Remove OEM hose from the crank case outlet. (note: later connects to Provent's lower outlet's hose).
- **STEP 3:** Attach Drain Hose to base of Provent base, secure with hose clamp, feed drain hose down through engine bay.
- **STEP 4:** Fit Provent Bracket using OEM nuts. Remove nuts, place bracket over bolts, return OEM nuts.
- **STEP 5:** Fit Provent to the Bracket using supplied spacer, bolts & washers. (spacer placed between Bracket and Provent saddle)

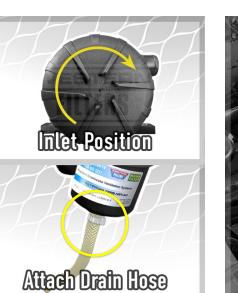

STEP 3:

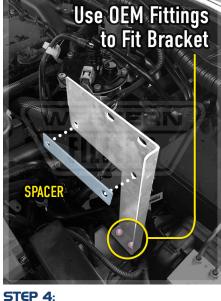



Remove BreatherHose

from Crank Case Outlet

STEP 5:

45 Forge St, Blacktown. NSW 2I48 | MON to FRI: 7:00am-5:00pm | SAT: 7:00am-I2:00pm

Tube

follow us on

) (シ) (凶) v

WESTERN FILTERS

www.westernfilters.net.au | enquiries@westernfilters.com.au

T: (02) 9831 1715

FILTERS, FILTER CLEANING & MORE



Provent Kit for Nissan Navara 2.3L ST NP300 2015-on 4x4 D23 YD23 DOHC Di I6V

KIT No: OS-PROV-I7

STEP 6: Connect Provent Lower Hose:

- Attach Shorter Hose to the Lower Outlet on the Provent Unit.
- Loop the hose around the back of the engine
- Join to the OEM Hose (connected to the Air Intake.

STEP 7: Connect Provent Top Hose:

- Attach molded, Longer hose to the Top Inlet of the Provent Unit.
- Loop the hose around the back of the engine (as above).
- Attach the end with the 90° to the Crank Case Outlet.


STEP 8: Cable Ties as shown.


STEP 9: Return the Plastic Engine cover.

For more information, see our Installation Video Presentation: WF Provent Kit Prov-17 Installation >



STEP 6:

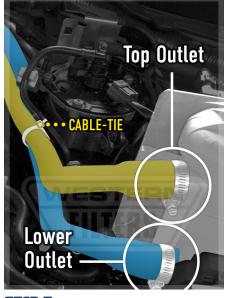

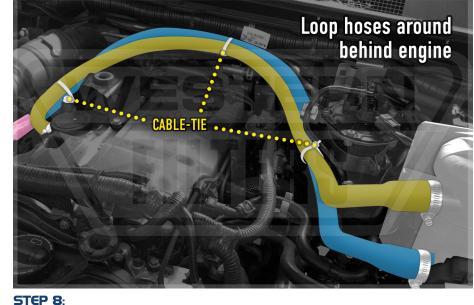

STEP 7:

45 Forge St, Blacktown. NSW 2I48 | MON to FRI: 7:00am-5:00pm | SAT: 7:00am-I2:00pm

follow us on

(I) westernfilters1