

Toyota Prado KDJ 120R Series 2006-09 TD 1KD-FTV (with/without ABS)

OS-PROV-18

**INLET** →

← **OUTLET**

**WARNING: Engine damage will occur if incorrectly connected. Please follow Installation Guide**

For vehicles that have travelled over 80,000 kms we recommend an intake manifold clean !

**MANN Provent 200 IV Oil Catch Can Kit Install Guide**

**CAUTION: \*\* Ensure the engine is OFF & COOL before installation ! \*\***

**STEP 1:** Identify Install Area and remove plastic engine cover

**STEP 2:** Release the plastic bracket catch and swivel the Provent ports to the position shown. Fit the clear Drain Hose to the Provent base outlet, add clamp and tighten.

**STEP 3:** Fit the Provent onto the kit bracket and tighten fittings.

**STEP 4:** Identify the two fittings (two bolts) holding the radiator overflow bottle. (If need be.. remove the plastic covering the radiator). Release and remove the bolts.


**STEP 5 (Next Page): \*\* ADD Drain Hose before securing the bracket.**




**STEP 1:**



**STEP 2:**

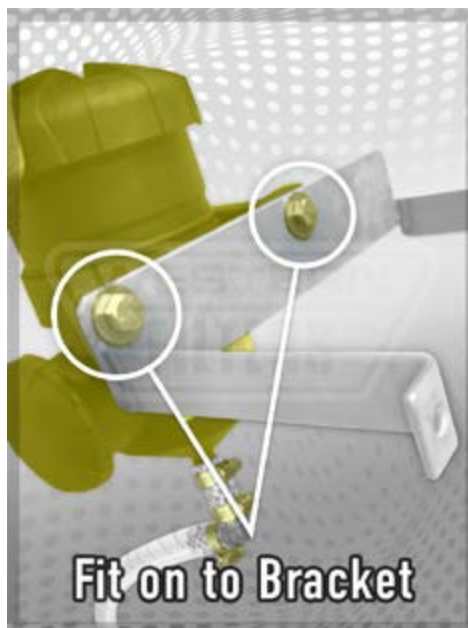

**STEP 3:**

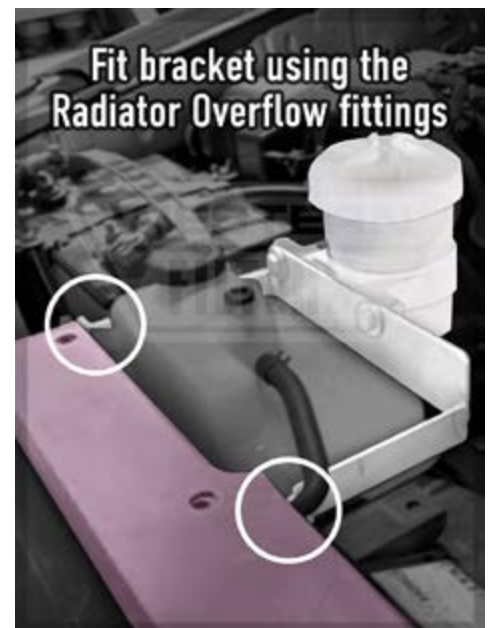

**STEP 4:**


Toyota Prado KDJ 120R Series 2006-09 TD 1KD-FTV (with/without ABS)

OS-PROV-18

- STEP 5:** Slide the Drain Hose down, across and between the chassis rail (outer) and inside the rubber inner guard.  
Re-install Radiator Overflow bottle bolts - now also holding the Provent Kit Bracket.
- STEP 6:** Remove the steel pipe running from the Crankcase Outlet from the vehicle (secured by a single bolt).
- STEP 7:** Connect the Lower Hose (slightly shorter) to the Provent Lower outlet.  
Fit the other end to the Air Inlet - just before the Turbo.
- STEP 8:** Connect the Top Hose to the Provent Unit Top Inlet. With the other end connected to the Crankcase Outlet.  
The plastic fitting will fit straight in to the factory rubber fitting, coming off the Crankcase Outlet.
- STEP 9:** Secure the hoses with supplied Cable Ties to stop any rubbing between components where necessary.
- STEP 10:** Re-check and tighten all hose clamps. **\*\* Ensure the Drain TAP is OFF / CLOSED (horizontal position) \*\***
- STEP 13:** Re-install engine cover and job done !

View the Install Slide Presentation: [SCAN QR-CODE on Pg1 >](#)

**\*\* MAINTENANCE: The Mann Provent element should last for over 40,000 kms.  
We recommend you drain the system once a month into a cup & dispose of contents carefully. \*\***

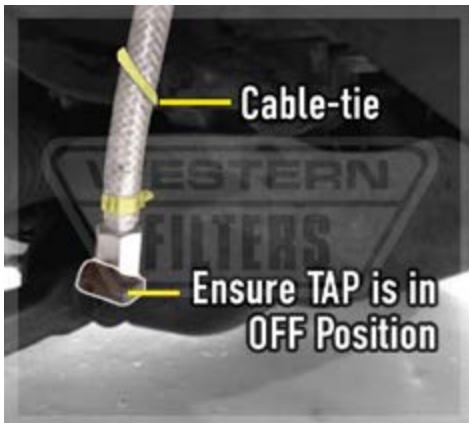

STEP 5:



STEP 6:



STEP 7:



STEP 8:



STEP 9:



STEP 10: