

Provent Oil Catch Can Kit for Holden Colorado RG & Z71 2.8L Turbo CRD (jun 2012 - sept 2016)

Kit No: OS-PROV-19




Mann Provent 200 Catch Can Kit Install Guide

- STEP 1:** Switch off engine, remove the keys from the ignition.
Ensure engine is cool enough to work in the engine bay.
Remove engine's plastic cover, pulling up to unclip.
- STEP 2:** Identify Install Area (passenger side of engine bay)
- STEP 3:** Identify the bolts behind the ECU (passenger side)
- Remove bolt from inside the engine bay (closest to the side fender)
- Use supplied longer bolt, fit from inside the wheel arch.
- STEP 4:** Fit Provent Bracket through bolt hole and secure with supplied nut.
- STEP 6:** Adjust Provent unit into position as displayed. Fit Drain Hose to the base of the Provent Unit - Tighten the hose clamp.



STEP 2:

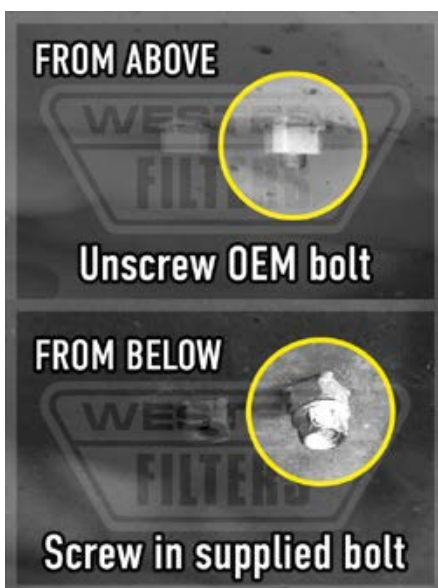

STEP 3:



STEP 4:



STEP 5:

Provent Oil Catch Can Kit for Holden Colorado RG & Z71 2.8L Turbo CRD (jun 2012 - sept 2016)


Kit No: OS-PROV-19

- STEP 6:** Fit the Provent Unit to the Bracket using the supplied spacer, bolts and washers.
(spacer placed between Bracket and Provent saddle)
- STEP 7:** Feed the clear Drain Hose down the side of the engine bay (ensure hose comes out inside the wheel arch).
Cut the Drain Hose the desired length and fit the Drain Tap - Tighten hose clamp.
*** Ensure Drain Tap is CLOSED ***
- STEP 8:** Remove the factory hose that runs from the top Crankcase Outlet to the Air Inlet.
Fit the supplied 16mm Silicone Elbow to the Crankcase Outlet.
- STEP 9:** Run the 16mm Top Hose from the 90 degree plastic fitting and connect to the Top Inlet of the Provent.
Secure with supplied clamps.
- STEP 10:** Fit the 19mm Outlet silicone fitting and join to the supplied 19mm Hose.
Run from the Lower Provent Outlet to the back of the engine and up to the fitting on the Air Intake.
Secure with hose clamps.
- STEP 11:** Cable-tie any other hoses, to prevent rubbing. Re-fit engine cover. Your done !

View Install Slide Presentation: [SCAN QR-CODE \(page.1\) >](#)



STEP 6:

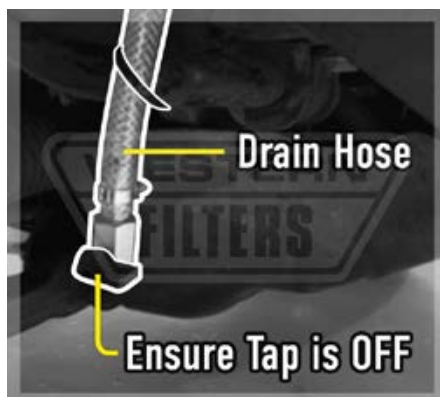


STEP 7:



STEP 8:



STEP 9:

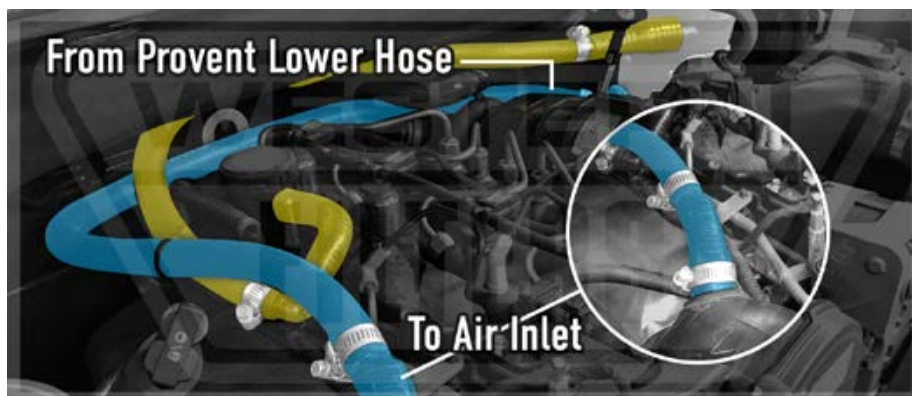

STEP 10: