

Ford Everest 2015-22 3.2L Turbo Diesel 5Cyl. P5AT DI DOHC

OS-PROV-20



WARNING: Engine damage will occur if incorrectly connected. Please follow Installation Guide
For vehicles that have travelled over 80,000 kms we recommend an intake manifold clean !

MANN Provent 200 IV Oil Catch Can Kit Install Guide


CAUTION: ** Ensure the engine is OFF & COOL before installation ! **

- STEP 1:** Remove the keys from the ignition. Remove the engine cover.
- STEP 2:** Identify the 2x10mm Nyloc Nuts to be removed on the fuel filter bracket and the other as shown.
- STEP 3:** Fit the Provent Bracket inside the engine bay as shown and re-fit the previously removed 2x10mm nuts.
- STEP 4:** Place the supplied Nyloc Nut over the existing air conditioner outlet bracket nut.


[SCAN QR-CODE To View Install Slide Presentation](#)



STEP 1:

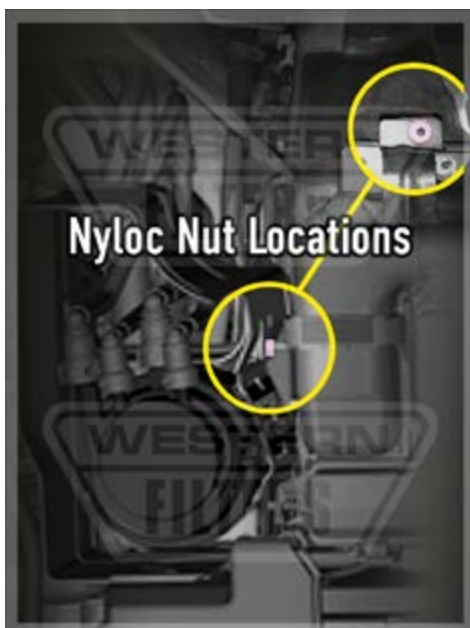

STEP 2:

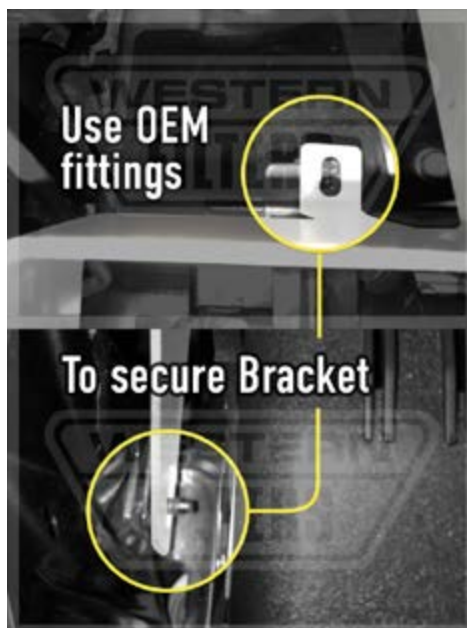

STEP 3:



STEP 4:

Ford Everest 2015-22 3.2L Turbo Diesel 5Cyl. P5AT DI DOHC

OS-PROV-20

STEP 5: Adjust the Provent 200 Unit one position clockwise in its bracket, fit the drain hose to the unit's lower outlet and attach to supplied stainless bracket using the supplied bolts & washers.

STEP 6: Manouever the Provent Drain hose down to the chassis rail and inside the passenger side wheel arch, cut the drain hose ato the desired length and attach the drain cock and secure with supplied hose clamp.

STEP 7: Identify the Crankcase Outlet. Remove the hose clamp and hose, then turn the fitting back towards the windscreen.

STEP 8: Attach the longer supplied hose to the Lower Provent Outlet, run hose carefully around the back of the engine and join to the OEM Air Intake Hose, previously connected from the crankcase outlet. Secure using supplied clamps.

STEP 9: Fit the remaining hose to the top inlet of the Provent 200 unit feed hose around to the crankcase outlet, secure with hose clamps provided.


STEP 10: Cable tie hoses to minimise rubbing, tighten all clamps, ensure the drain valve is in the closed position. Then return the engine cover.



STEP 5:




STEP 6:

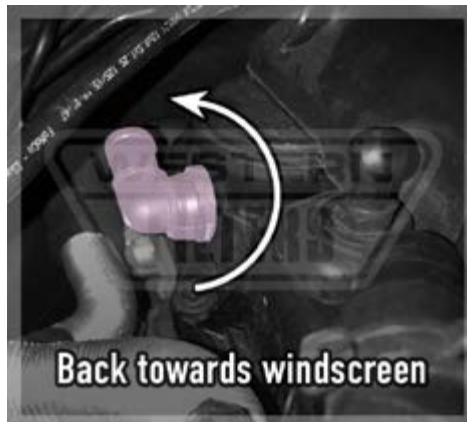


STEP 7:



STEP 8:

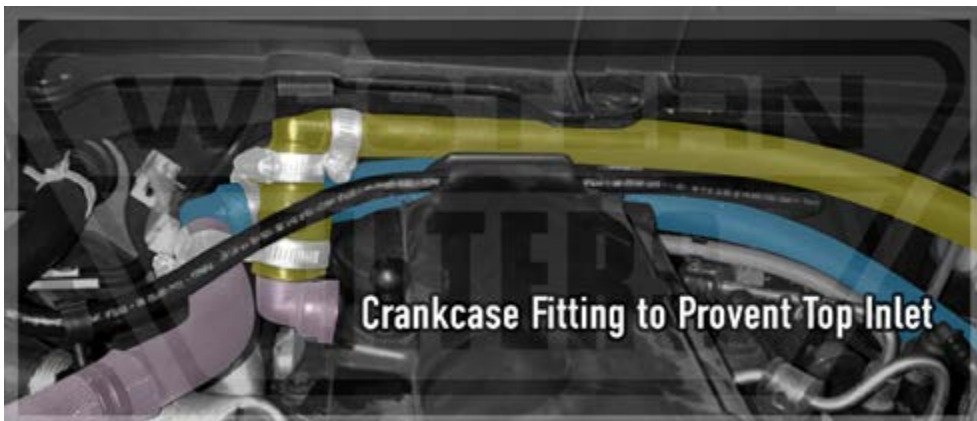

STEP 9:

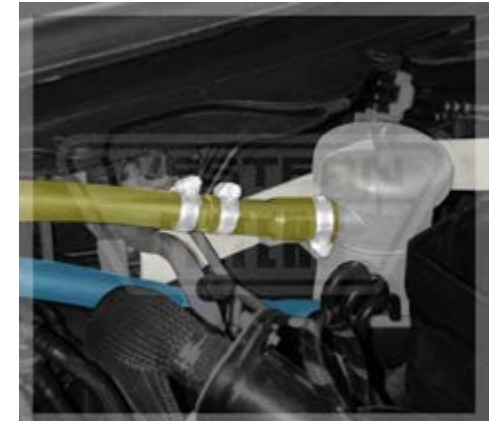

STEP 10: