

Installation Guide for Provent Kit for Toyota Landcruiser 200 Series (from 2008 On) Turbo Diesel

05-PROV-2Ip (Passenger Side Installation)



MANN Provent 200 IV Catch Can Kit Install Guide

- STEP 1:** Ensure Engine is OFF and cool enough to work on.
- STEP 2:** Identify Install Area (passengers side of engine bay).
• Remove plastic engine cover
- STEP 3:** Identify fixing location. Remove OEM bracket.
• Fit Provent Bracket on studs. Return OEM bracket.
- STEP 4:** Before attaching Provent to bracket:
• Swivel Provent Inlet in to Position • Attach Drain Hose to base
- STEP 5a:** Fit Provent to Bracket • Bolt the Bracket in to place
- STEP 5b:** Feed Drain Hose down thru the eng.Bay (img next page)
• Secure - with bolt, hose clamp and cable ties.




STEP 2:



STEP 3:



STEP 4:

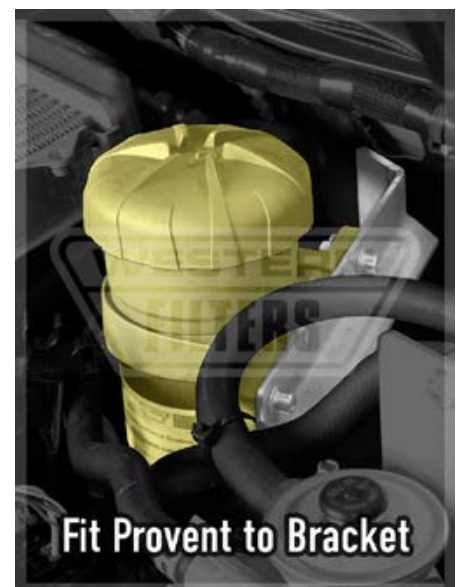

STEP 5a:

Installation Guide for Provent Kit for Toyota Landcruiser 200 Series (from 2008 On) Turbo Diesel

OS-PROV-2lp (Passenger Side Installation)



STEP 5b:

STEP 6: Remove Breather Hose from between the Crankcase Outlet and the Air Intake.

STEP 7: Fit Hose from Provent Lower Outlet to Air Intake.

- Secure with clamps.

STEP 8: Fitt Hose from Provent Top Inlet to Crankcase Outlet.


- Secure with clamps.
- Cable-tie hoses to minimise rubbing
- Double check all clamps are tight.

STEP 9: Replace engine cover

- ensure all tools have been removed from the engine bay.

TIP: Replace Mann Provent element every 40,000km to 50,000km.

View Install Slide Presentation:
[SCAN QR-CODE \(page.1\) >](#)

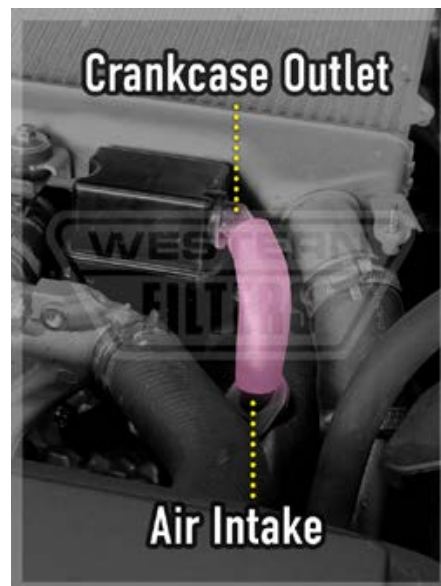

STEP 6:



STEP 7:



STEP 8:



STEP 9: