WESTERN WESTERN FILTERS FILTERS FILTERS, FILTER CLEANING & MORE T: [02] 9831 1715 www.westernfilters.net.au | enquiries@westernfilters.com.au

MANN+

Mitsubishi Triton 2006-2009 ML 3.2L DI-D 4M41T Eng. Common Rail

OS-PROV-22



MANN Provent 200 IV Oil Catch Can Kit Install Guide CAUTION: ** Ensure the engine is OFF & COOL before installation ! **

STEP 1: Identify Install Area.

STEP 2: Swivel Provent Inlet to the correct position. Attach the Drain Hose to the base of the Provent. Secure with clamp. Attach the ball valve Tap, secure with supplied clamp.

** Ensure Tap is CLOSED **

STEP 3: Fit the Provent 200 to the supplied Bracket

STEP 4: Identify and release the factory fittings. Position and fit the Provent Bracket, return fittings and tighten.



STEP 1:



STEP 2:




STEP 3:

Tuhe



STEP 4:

45-47 Forge St, Blacktown NSW 2148 | MON to FRI: 7:30am-5:00pm | SAT: 7:30am-12:00pm




WESTERN WESTERN FILTERS FILTERS FILTERS, FILTER CLEANING & MORE T: [02] 9831 1715 www.westernfilters.net.au l enquiries@westernfilters.com.au

C H MANN+

Mitsubishi Triton 2006-2009 ML 3.2L DI-D 4M41T Eng. Common Rail

OS-PROV-22

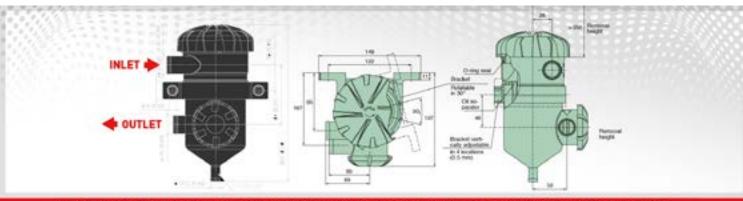

WARNING: Engine damage will occur if incorrectly connected. Please follow Installation Guide

- **STEP 7:** Mount the Bracket to the vehicle, running the clear Drain Hose down between the inner guard and chassis rail,
- **STEP 8:** Remove the Breather Hose from the top of the Crankcase which runs to the Air Inlet.
- **STEP 9:** Attach the Short Straight Hose to Provent's Lower Outlet, join the other end to the Air Inlet. Secure all hoses with clamps.
- **STEP 10:** Attach the Long Molded Bent Hose to the Provent Top Inlet, Attach the 16mm end to the Crank Case Outlet . Secure with supplied clamps.
- STEP 11: Re-fit the Plastic Engine Cover.

View Install Slide Presentation: SCAN QR-CODE (page.1) >




STEP 8:




STEP 9:

Tube

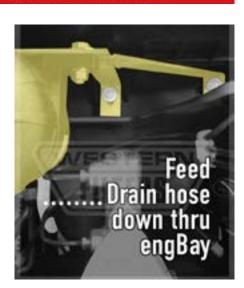

STEP 7:

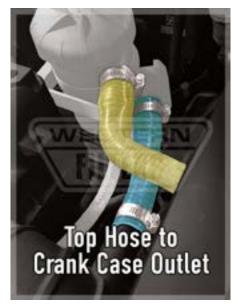

STEP 10:

45-47 Forge St, Blacktown NSW 2148 | MON to FRI: 7:30am-5:00pm | SAT: 7:30am-12:00pm

