

**Provent Kit for Isuzu D-Max (2012-2016) 3.0L Turbo Diesel 4Cyl. DOHC 4JJI-TCX**

**KIT No: OS-PROV-26**




## Fitting Instructions for Provent 200 Kit

- STEP 1:** Ensure Engine is OFF and cool enough to work on.
- STEP 2:** Remove Plastic Engine Cover by pulling up (img.1).
- STEP 3:** Remove OEM bolt, attach Provent bracket, return bolt & tighten (img.2)
- STEP 4:** Before attaching Provent to bracket, ensure position is correct (img.3)  
**Fit Clear Drain Hose to the Lower Outlet of the Provent 200 unit** and then secure with hose clamp (img.3)
- STEP 5:** Fit Provent to Bracket, secure with supplied bolts & washers (img.4)




Step 2 / Img 1:

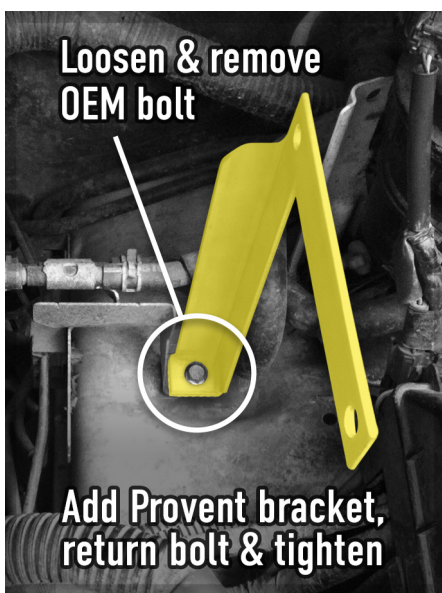

Step 3 / Img 2:



Step 4 / Img 3:

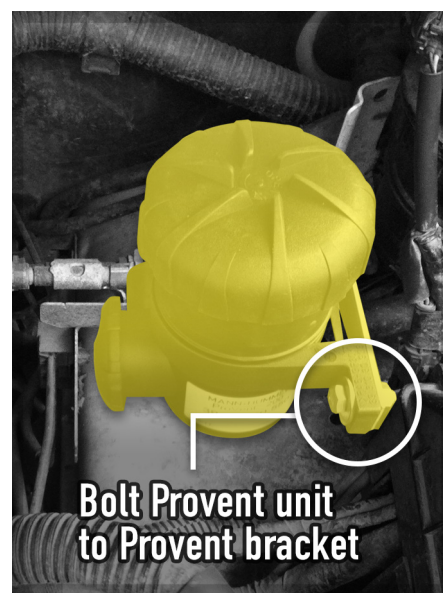


Step 5 / Img 4:

**Provent Kit for Isuzu D-Max (2012-2016) 3.0L Turbo Diesel 4Cyl. DOHC 4JJI-TCX**


**KIT No: OS-PROV-26**

- STEP 7:** Remove existing OEM hose from engine (img.5).
- STEP 8:** Attach the Provent's Lower Hose (LH) to the lower opening (img.6). Secure with supplied hose clamps.
- STEP 9:** Attach the Provent's Upper Hose (UH) to the upper opening (img.7). Secure with supplied hose clamps.
- STEP 10:** Secure other hose ends to the Provent unit (LH>LH / UH>UH). Secure with supplied hose clamps.
- STEP 11:** Cable tie hoses to avoid rubbing where necessary, then replace the plastic engine cover.


For additional instructions view our installation video:  
[Prov-26 Installation Video >](#)

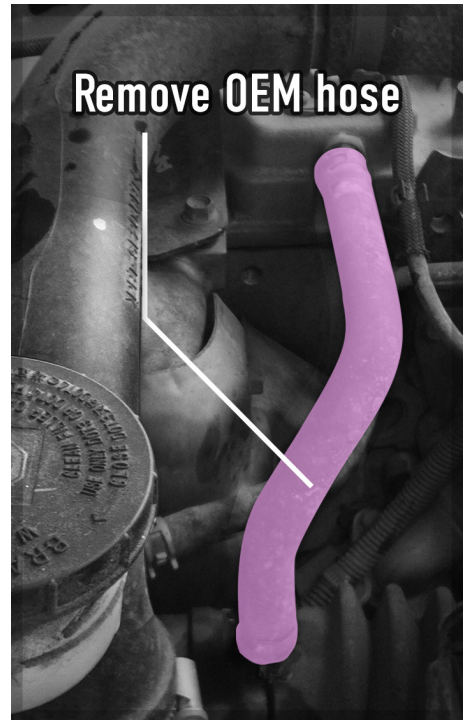

**Step 7 / Img 5:**

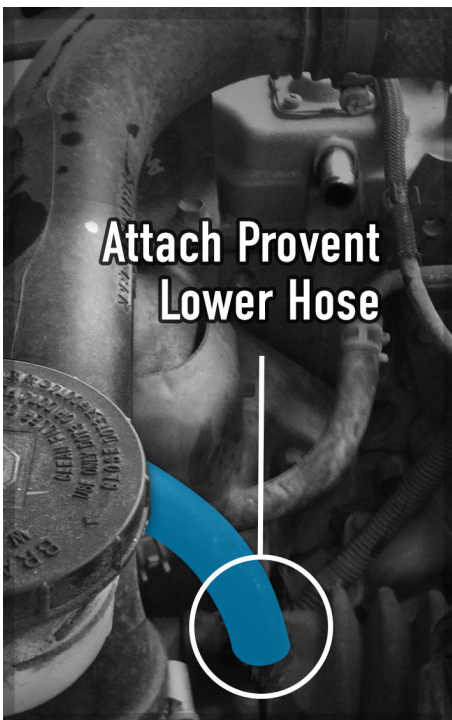

**Step 8 / Img 6:**

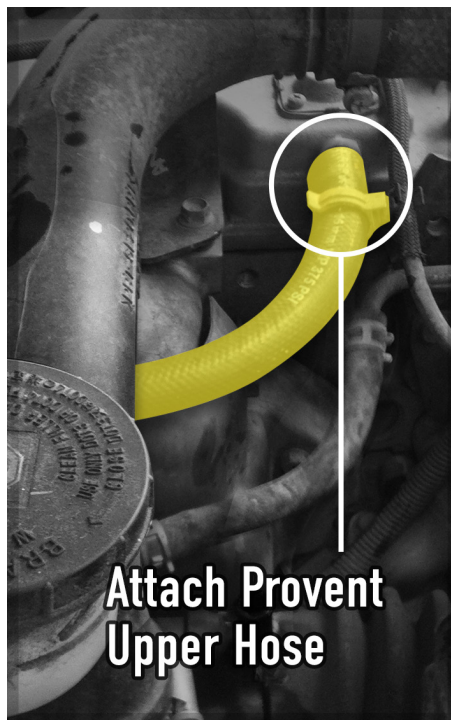

**Step 9 / Img 7:**



**Step 10 / Img 8:**