

Provent Kit for VOLKSWAGEN AMAROK (2010-on) 2.0L Turbo Diesel BiTDI 132KW/180HP

KIT No: OS-PROV-28




Mann Provent 200 Catch Can Kit Install Guide

- STEP 1:** Ensure Engine is OFF and cool enough to work on.
- STEP 2:** Identify OEM Hose (between Air Intake & Crank Case Outlet (img.1)).
- STEP 3:** Identify install area (right side of engine bay) (img.2).
- STEP 4:** Remove OEM nut then slide bracket over OEM bolt into place. Secure with OEM nut and supplied bolt. (img.3).
- STEP 5:** Before attaching Provent to bracket, Rotate in to correct position.
- Fit Drain Hose to the base of the Provent Unit
 - Feed Drain Hose down through the engine bay
 - Secure with hose clamp (img.4)



STEP 2:

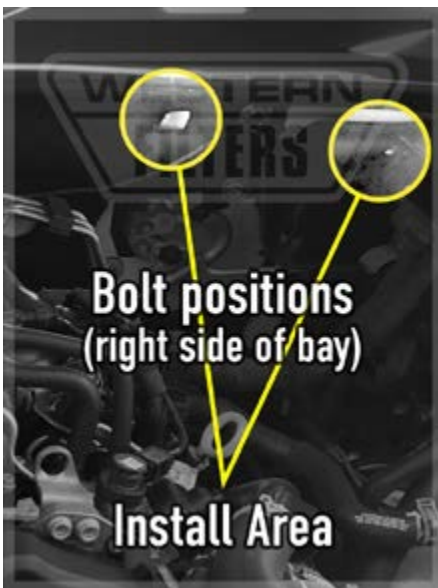

STEP 3:



STEP 4:



STEP 5:

Provent Kit for VOLKSWAGEN AMAROK (2010-on) 2.0L Turbo Diesel BiTDI 132KW/180HP

KIT No: OS-PROV-28

STEP 6: Fit Provent to Bracket, with supplied bolts, nuts & washers

STEP 7: Attach hoses to Provent


STEP 8: Replace the OEM hose with Provent's Lower Hose (in blue)
Fitting to the Air intake
- secure with supplied hose clamps

STEP 9: Replace the OEM hose with Provent's Upper Hose (in gold)
Fitting to the Crank Case inlet
- secure with supplied hose clamps

STEP 10: Cable tie hoses to avoid rubbing where necessary.

STEP 11: Dust off. Job done !

To View the Install Slide Presentation:
[SCAN QR-CODE on page 1](#)

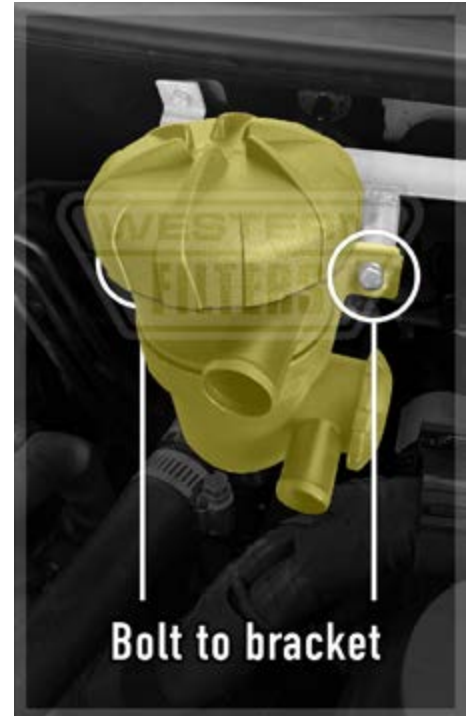

STEP 6:



STEP 7:



STEP 8:



STEP 9: