

Volkswagen Amarok (2017-on) 3.0L V6 Turbo Diesel TDi550 Highline

OS-PROV-29



### MANN Provent 200 IV Oil Catch Can Kit Install Guide

**CAUTION: \*\* Ensure the engine is OFF & COOL before installation! \*\***

- STEP 1:** Identify and remove the OEM Hose
  - Between the Air Intake and the Crank Case Outlet.
- STEP 2:** Identify Install Area (use the OEM nut & bolt to secure the unit).
- STEP 3:** Before attaching Provent to bracket:
  - Rotate Provent Inlets in to displayed position.
  - Fit Drain Hose to the base of the Provent Unit
- STEP 4:** Feed Drain Hose down through the engine bay, inside wheel arch
  - Secure with hose clamp and cable ties
  - Ensure Tap is in OFF position




**STEP 1:**



**STEP 2:**



**STEP 3:**

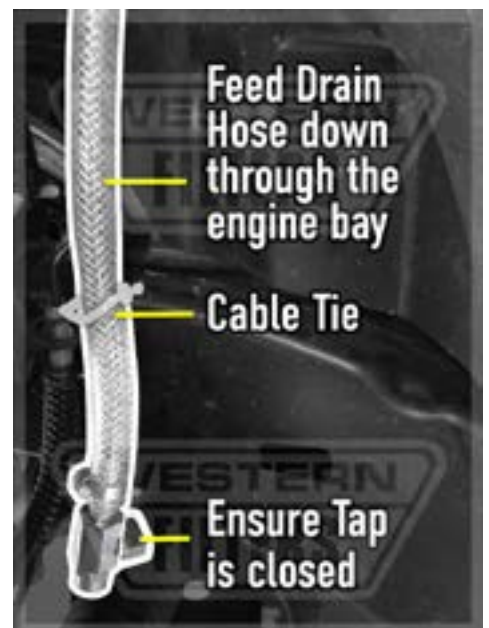

**STEP 4:**

45-47 Forge St, Blacktown NSW 2148 | MON to FRI: 7:30am-5:00pm | SAT: 7:30am-12:00pm

Volkswagen Amarok (2017-on) 3.0L V6 Turbo Diesel TDi550 Highline

OS-PROV-29

**STEP 5:** Using the OEM fittings Secure Bracket, then bolt on Provent unit - secure all with clamps.

**STEP 6:** Attach supplied Hose (displayed in blue) to the Air Intake - then connect to the Provent Lower Outlet.

**STEP 7:** Attach the other supplied Hose (displayed in gold) to the Crank Case - then connect to the Provent Top Inlet.

*\*\* Place hoses Behind Heat Shield ! - - - note: Hose 'B' crosses over Hose 'A' \*\**

**STEP 8:** Cable-tie hoses to avoid rubbing. Dust off. Job done !

To View the Install Slide Presentation: [SCAN QR-CODE on page 1](#)



**STEP 5:**




**STEP 6a:**



**STEP 6b:**



**STEP 7a:**

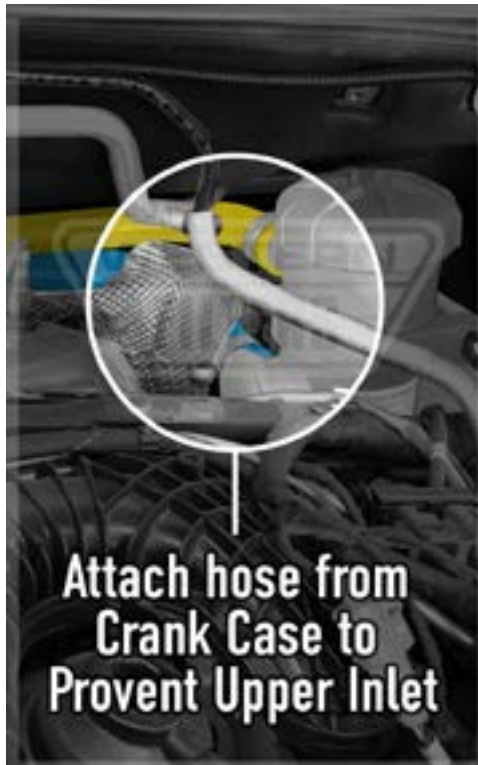

**STEP 7b:**



**STEP 8:**