

Provent Kit for Volkswagen Amarok (2017-on) 3.0L V6 Turbo Diesel TDi550 Highline

KIT No: 05-PROV-29




Mann Provent 200 Catch Can Kit Install Guide

- STEP 1:** Ensure Engine is OFF and cool enough to work on.
- STEP 2:** Identify and remove the OEM Hose
- Between the Air Intake and the Crank Case Outlet.
- STEP 3:** Identify Install Area (use the OEM nut & bolt to secure the unit).
- STEP 4:** Before attaching Provent to bracket:
- Fit Drain Hose to the base of the Provent Unit
- Feed Drain Hose down through the engine bay, inside wheel arch
- Secure with hose clamp and cable ties
- Ensure Tap is in OFF position




STEP 2:

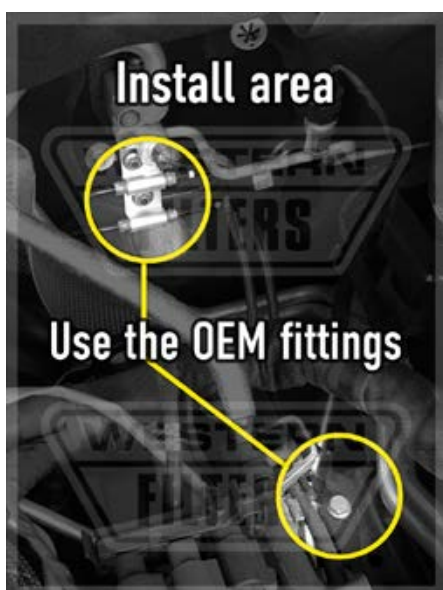

STEP 3:



STEP 4:

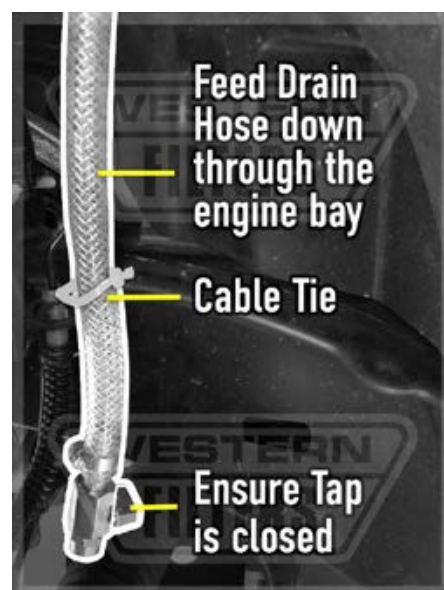

STEP 5:

Provent Kit for Volkswagen Amarok (2017-on) 3.0L V6 Turbo Diesel TDI550 Highline

KIT No: 05-PROV-29

STEP 5: Using the OEM fittings Secure Bracket, then bolt on Provent unit - secure all with clamps.

STEP 6: Attach supplied Hose (displayed in blue) to the Air Intake - then connect to the Provent Lower Outlet.

STEP 7: Attach the other supplied Hose (displayed in gold) to the Crank Case - then connect to the Provent Top Inlet.

*** Place hoses Behind Heat Shield ! - - - note: Hose 'B' crosses over Hose 'A' ***

STEP 8: Cable-tie hoses to avoid rubbing. Dust off. Job done !

To View the Install Slide Presentation: [SCAN QR-CODE on page 1](#)




STEP 5:



STEP 6a:



STEP 6b:

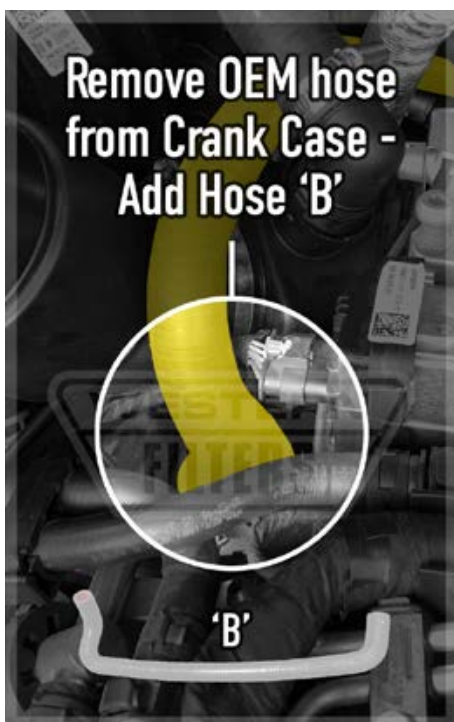

STEP 7a:



STEP 7b:



STEP 8: