

Provent Kit for Toyota Landcruiser 70 Series (2007-on) 4.5L V8 TD VDJ76/78/79 IVD-FTV

**KIT No: OS-PROV-30**



## Mann Provent 200 Catch Can Kit Install Guide

- STEP 01:** Ensure Engine is OFF and cool enough to work on.
- STEP 02:** Identify Install Area (Driver's side, below Power Steering reservoir).
- STEP 03:** Fit Bracket in place:
- Remove PS Reservoir Fittings - slide Provent Bracket base under
  - Return PS Reservoir Fittings - Provent Bracket is now in place.
  - Fit supplied Stabilising Strut with supplied bolts (displayed in gold).
- STEP 04:** Rotate Provent Ports in to position
- Fit Drain Hose to the base of the Provent Unit
  - Feed Drain Hose down through the engine bay, inside wheel arch
  - Secure with hose clamp & Cable-ties
- STEP 05:** Fit Provent to Bracket - Secure with hose clamp



**STEP 02:**



**STEP 03:**



**STEP 04:**



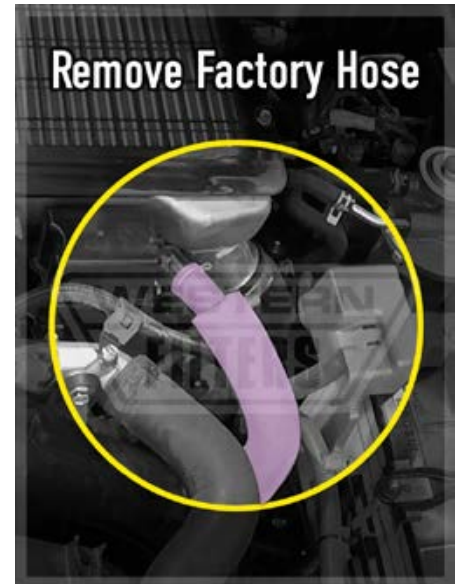
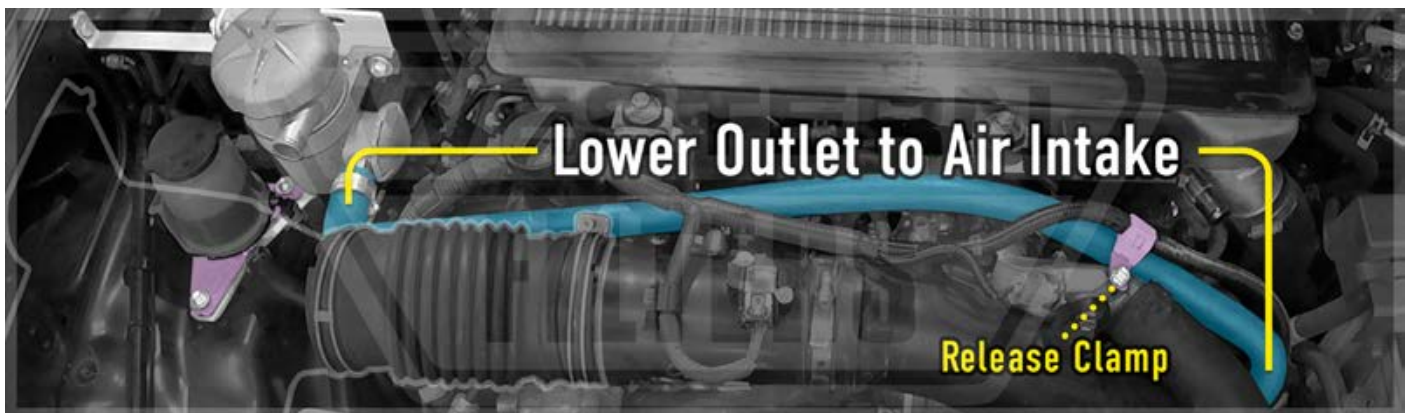
**STEP 05:**

**Provent Kit for Toyota Landcruiser 70 Series (2007-on) 4.5L V8 TD VDJ76/78/79 IVD-FTV****KIT No: OS-PROV-30****STEP 06:** Identify OEM Hose between Air Intake & Crankcase Outlet.**STEP 07:** Attach the supplied Longer Hose to the Air Intake and run back to the Provent Lower Outlet (see below images with Blue Hose).

Release the nut holding the OEM Hose Clamp  
Place the Lower Hose below. Once in position, re-attach Clamp.

**STEP 08:** Attach the other supplied Hose to the Crankcase Outlet and run back to the Provent Top Inlet, placing atop of the Lower Hose (see below images with Gold Hose).**STEP 09:** Cable-tie hoses to avoid rubbing where necessary. Dust off.  
Job done !

To View the Install Slide Presentation:  
[SCAN QR-CODE on page 1](#)

**STEP 06:****STEP 07:****STEP 08:**

45-47 Forge St, Blacktown. NSW 2148 | MON to FRI: 7:30am-5:00pm | SAT: 7:30am-12:00pm

Follow us on



westernfilters1