

Provent Catch Can Kit for LDV T60 (2017-on) 2.8L Turbo Diesel 4Cyl. 16V VGT + Intercooler

KIT No: OS-PROV-31



Mann Provent 200 Catch Can Kit Install Guide

STEP 1: Ensure Engine is OFF and cool enough to work on. Remove cover.

STEP 2: Identify Install Area - drivers side of engine bay

STEP 3: Use OEM Bolt to secure Bracket

- Place bracket base under fitting, slip washer on to bolt, screw in

STEP 4: Swivel Provent ports in to position

- Fit Clear Drain Hose to the Base of the Provent 200 unit secure with hose clamp
- Feed Hose down between engine bay - Ensure Tap is OFF.

STEP 5: Bolt Provent on to Bracket

- Place Provent in to position, then bolt on to bracket.



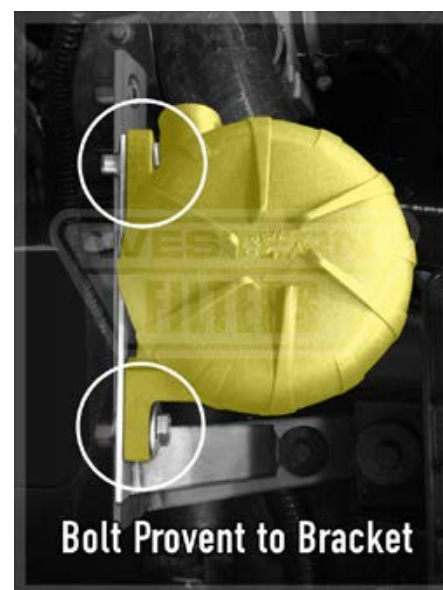
STEP 2:



STEP 3:



STEP 4:



STEP 5:

45-47 Forge St, Blacktown, NSW 2148 | MON to FRI: 7:30am-5:00pm | SAT: 7:30am-12:00pm

Follow us on



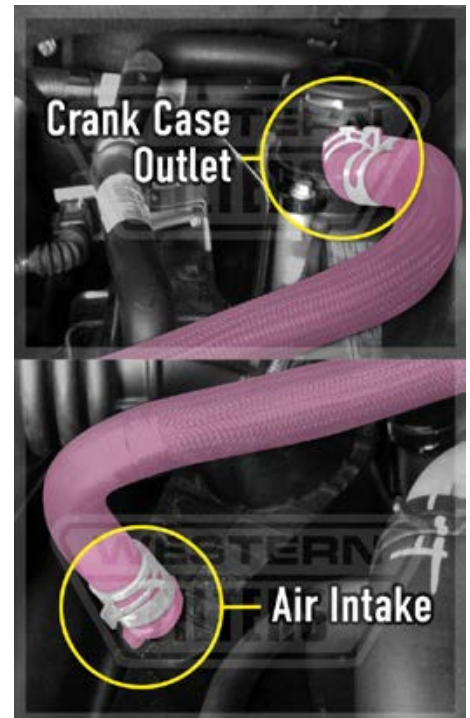
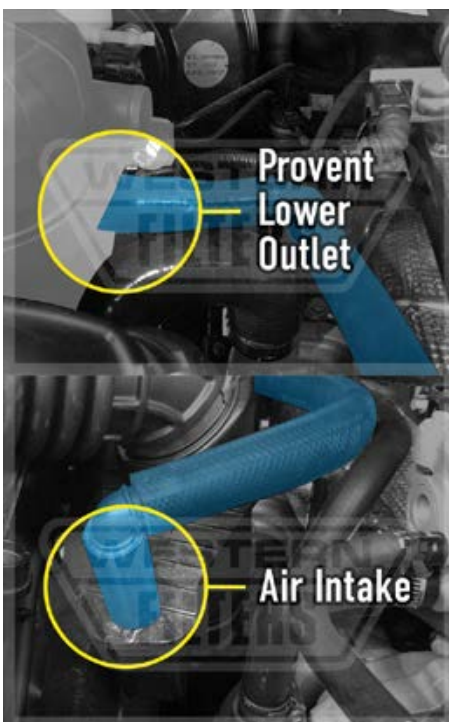
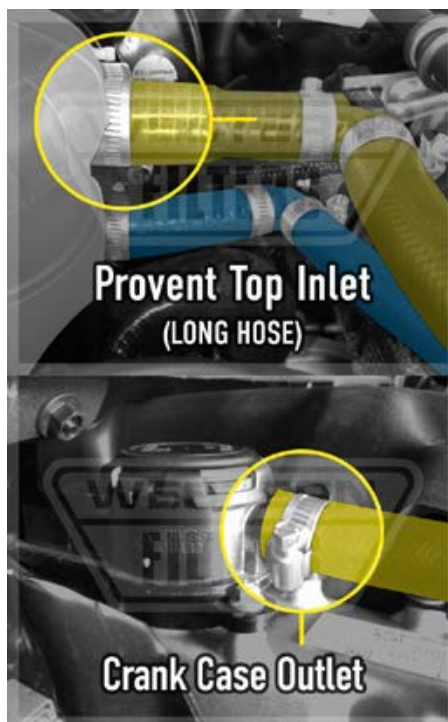
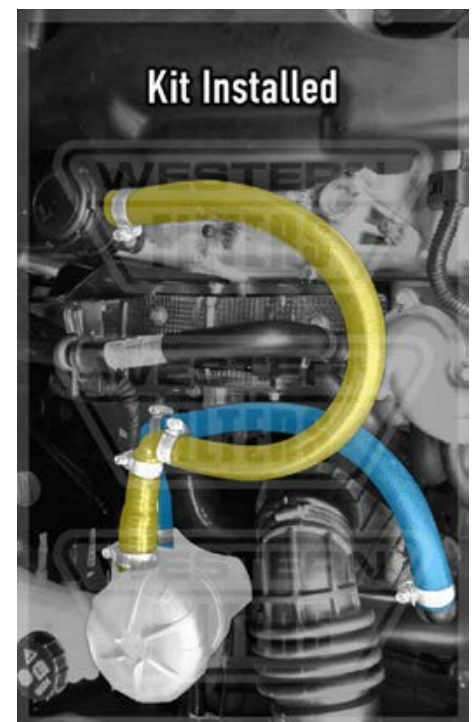
westernfilters1

Provent Catch Can Kit for LDV T60 (2017-on) 2.8L Turbo Diesel 4Cyl. 16V VGT + Intercooler**KIT No: OS-PROV-3I**

- STEP 7:** Remove OEM Breather Hose
- from between the top of the Crank Case and the Air Intake.
- STEP 8:** Fit Short Hose from Provent's Lower Outlet to the Air Intake
- secure with provided hose clamps.
- STEP 9:** Fit Longer Hose from Provent's Top Inlet to Crank Case Outlet
- secure with provided hose clamps.
- STEP 10:** Use Cable Ties if required.
- STEP 11:** Return engine cover

NOTE: Once installed, the lid of the Provent can be easily removed for observational purposes.

To View the Install Slide Presentation:
[SCAN QR-CODE on page 1](#)

**STEP 7:****STEP 8:****STEP 9:****STEP 10:**