

Provent Catch Can Kit for NISSAN Navara D40 (2012 on)

KIT No: 05-PROV-33



Mann Provent 200 Catch Can Kit Install Guide

STEP 1: Ensure Engine is OFF & COOL enough to work on.


STEP 2: Identify Install Area - passenger side of engine bay

STEP 3: Unclip the ECU Unit from the OEM Bracket, remove Bracket


STEP 4: Bolt in Provent Bracket, clip on ECU Unit

STEP 5: Swivel Provent in to position within it's plastic holder


- Fit Clear Drain Hose to the Base of the Provent 200
- Secure with hose clamp.
- Feed Drain Hose down between engine bay
- Ensure Drain Hose Tap is OFF !

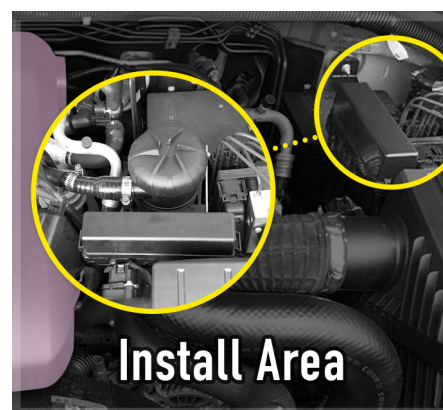

STEP 2:

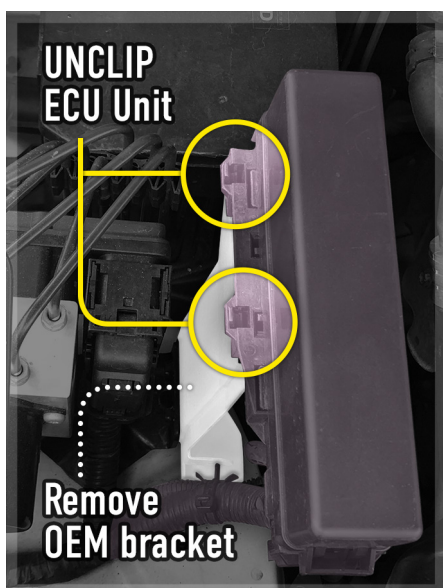

STEP 3:

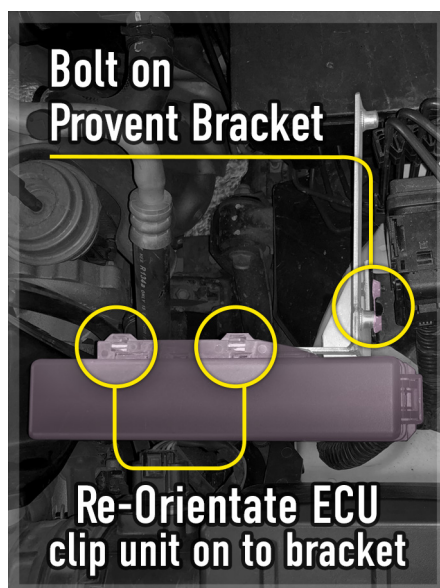

STEP 4:



STEP 5:

Provent Catch Can Kit for NISSAN Navara D40 (2012 on)

KIT No: 05-PROV-33

STEP 7: Remove OEM Breather Hose
- from Crank Case Outlet & Air Intake

STEP 8: Fit Short Hose
- from Provent Lower Outlet
- to the Air Intake
- secure with provided hose clamps


STEP 9: Fit Longer Hose
- from Provent Top Inlet
- to the Crank Case Outlet
- secure with provided hose clamps

STEP 10: Use Cable-ties if required.


STEP 11: You're Done !

Now installed, the Provent Lid can be easily removed for observation purposes.

To View the Install Slide Presentation:
[SCAN QR-CODE on page 1](#)

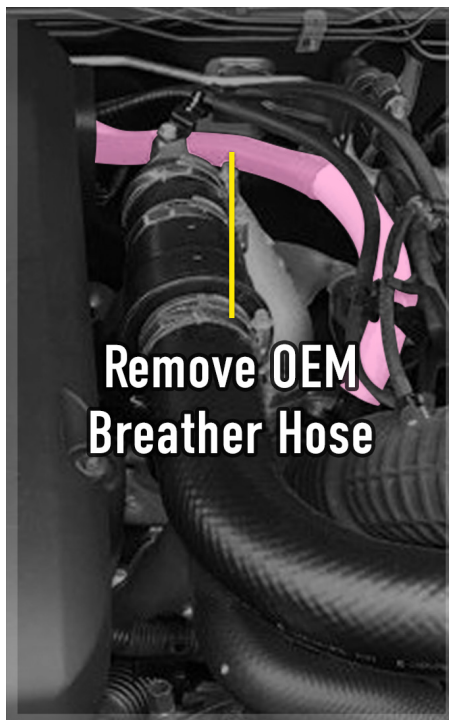


STEP 7a:

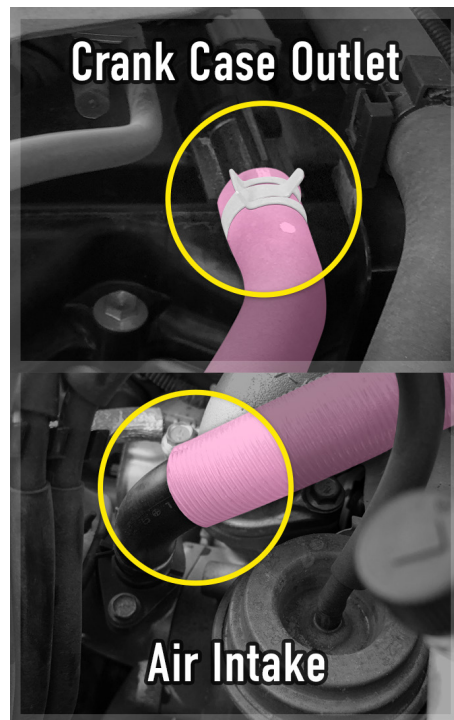


STEP 7b:



STEP 8:

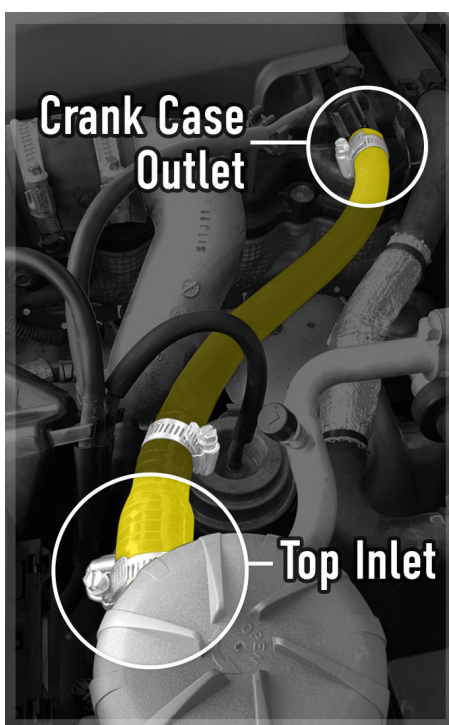

STEP 9:

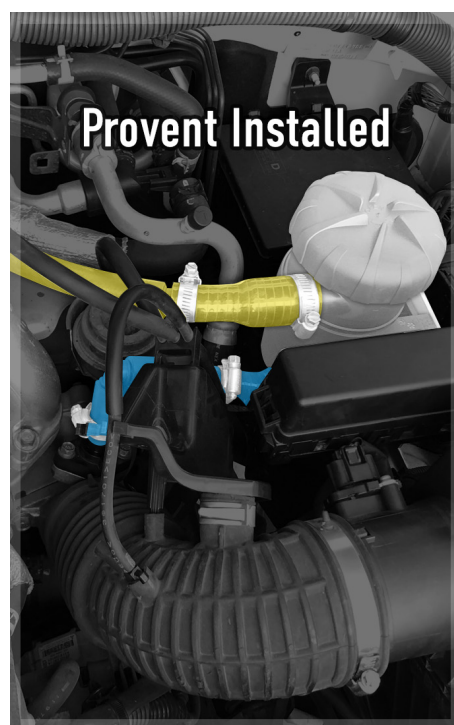

STEP 10: