

Provent Catch Can Kit for NISSAN Navara D40 (2012 on)

OS-PROV-33




**MANN Provent 200 IV Oil Catch Can Kit Install Guide**

**CAUTION: \*\* Ensure the engine is OFF & COOL before installation ! \*\***


- STEP 1:** Identify Install Area - passenger side of engine bay
- STEP 2:** Unclip the ECU Unit from the OEM Bracket, remove Bracket
- STEP 3:** Bolt in Provent Bracket, clip on ECU Unit
- STEP 4:** Swivel Provent in to position within it's plastic holder
  - Fit Clear Drain Hose to the Base of the Provent 200
  - Secure with hose clamp.
  - Feed Drain Hose down between engine bay
  - Ensure Drain Hose Tap is OFF !



**STEP 1:**

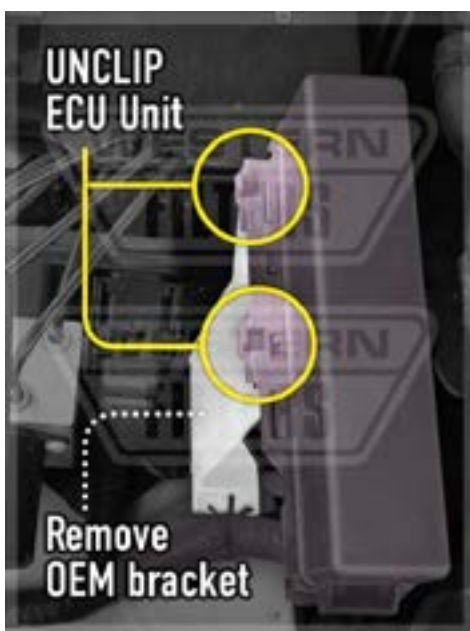

**STEP 2:**

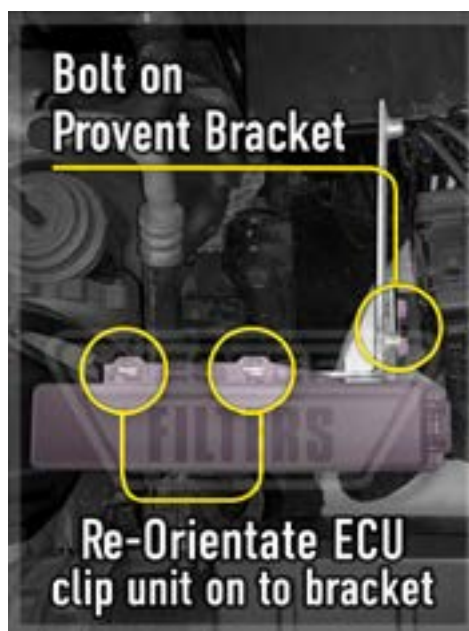

**STEP 3:**



**STEP 4:**

45-47 Forge St, Blacktown NSW 2148 | MON to FRI: 7:30am-5:00pm | SAT: 7:30am-12:00pm

### Provent Catch Can Kit for NISSAN Navara D40 (2012 on)

OS-PROV-33

**STEP 5:** Remove OEM Breather Hose  
- from Crank Case Outlet & Air Intake

**STEP 6:** Fit Short Hose  
- from Provent Lower Outlet  
- to the Air Intake  
- secure with provided hose clamps


**STEP 7:** Fit Longer Hose  
- from Provent Top Inlet  
- to the Crank Case Outlet  
- secure with provided hose clamps  
Use cable-ties if required.

**STEP 8:** You're Done !  
Now installed, the Provent Lid can  
be easily removed for observation  
purposes.

To View the Install Slide Presentation:  
[SCAN QR-CODE on page 1](#)




**STEP 5a:**

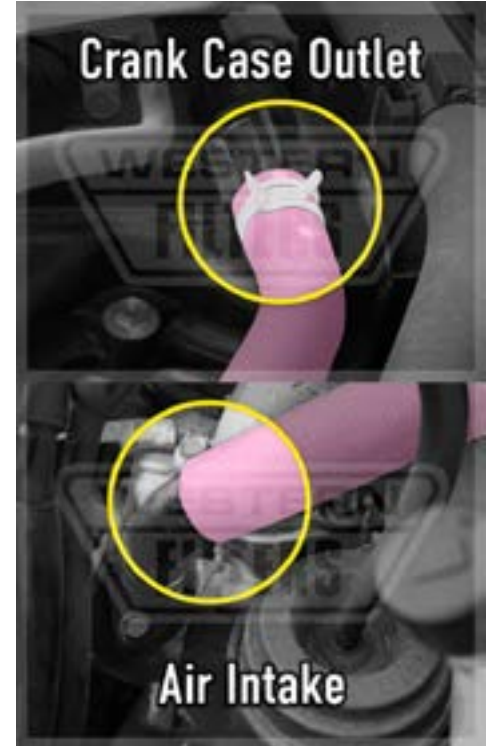

**STEP 5b:**



**STEP 6:**

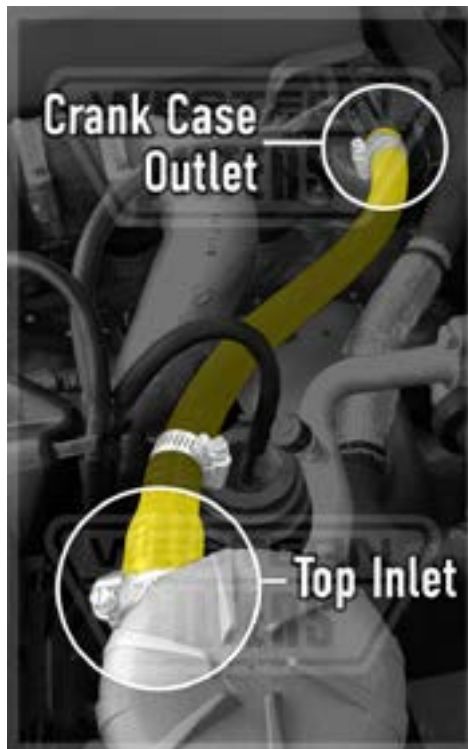

**STEP 7:**



**STEP 8:**