

Toyota Hilux 2005-13 3.0L D4D Turbo Diesel 1KD-FTV KUN16 w/o-ABS Thai

OS-PROV-34



**MANN Provent 200 IV Oil Catch Can Kit Install Guide**

**CAUTION: \*\* Ensure the engine is OFF & COOL before installation ! \*\***


- STEP 1:** Identify Install Area - drivers side of engine bay.
- STEP 2:** Before attaching Provent to bracket:
  - Swivel Provent Inlet in to Position
  - Attach Drain hose - to the base of the Provent
- STEP 3:** Feed Drain Hose Down - down through the engine bay
  - Secure - with hose clamp and cable ties.
- STEP 4:** Identify Fixing Points - bolts and washers supplied
  - Fit the Provent to Bracket. Fix Bracket in to place.




**STEP 1:**



**STEP 2:**

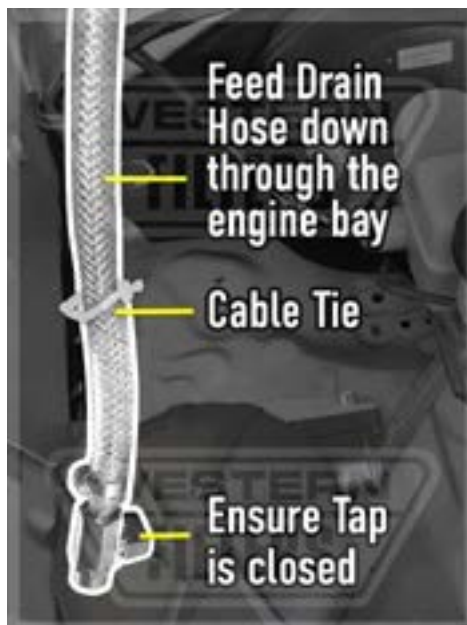

**STEP 3:**

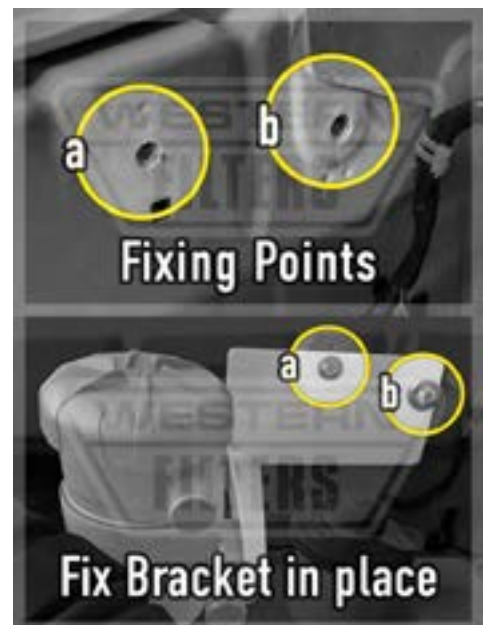

**STEP 4:**

Toyota Hilux 2005-13 3.0L D4D Turbo Diesel 1KD-FTV KUN16 w/o-ABS Thai

OS-PROV-34

**STEP 5:** Remove Breather Pipe - between Crankcase and Air Intake

**STEP 6:** Attach supplied 90° Hose - to Prevent Lower Outlet  
Connect to Air Intake - secure with clamps

**STEP 7:** Attach supplied Straight Hose - to Prevent Top Inlet  
Connect to Crankcase Outlet - secure with clamps

**STEP 8:** Cable tie hoses where necessary. Dust off. Job done !

To View the Install Slide Presentation: [SCAN QR-CODE](#) on page 1

**STEP 5:**



**STEP 6:**

Attach Hose from Lower Outlet to Air Intake

**STEP 7:**

Attach Hose from Top Inlet to Crankcase Outlet

**STEP 8:**