

Hyundai iLoad 2014-on 2.5L 4Cyl. Turbo Diesel DOHC 16V

OS-PROV-35




### MANN Provent 200 IV Oil Catch Can Kit Install Guide

**CAUTION: \*\* Ensure the engine is OFF & COOL before installation ! \*\***

- STEP 1:** Identify Install Area on Driver's side of engine bay.
- STEP 2:** Attach Drain Hose to base of Provent. Secure with Clamp.
- STEP 3:** Fit Provent 100 to Bracket with supplied fittings.
- STEP 4:** Feed Drain Hose down through engine bay
  - Secure Hose with Cable Tie
  - Ensure Drain Tap is in Closed position



**STEP 1:**

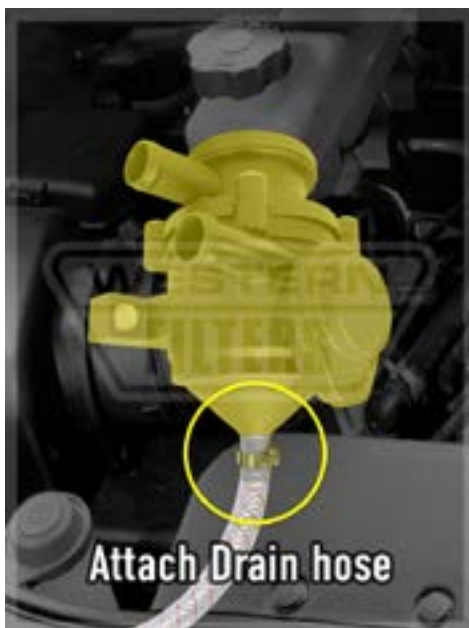

**STEP 2:**



**STEP 3:**



**STEP 4:**

Hyundai iLoad 2014-on 2.5L 4Cyl. Turbo Diesel DOHC 16V

OS-PROV-35

**STEP 5:** Release OEM Fitting

- Slide Provent Bracket in to place
- Return OEM nut and re-tighten.

**STEP 6:** Provent 100 fitted in place  
Use the Factory Fittings to fit Bracket.

**STEP 7:** Release the Breather Hose Clip and separate from the Air Intake.

**STEP 8:** Attach Provent Lower Hose  
- Attach Provent Lower Inlet Hose to the Crankcase Outlet Hose

**STEP 9:** Attach Provent Top Hose  
- Attach Prov Top Outlet Hose to Air Intake. Clamp all Hose connections.  
Cable tie Hoses together

To View the Install Slide Presentation:  
[SCAN QR-CODE on page 1](#)




**STEP 5:**




**STEP 6:**



**STEP 7:**

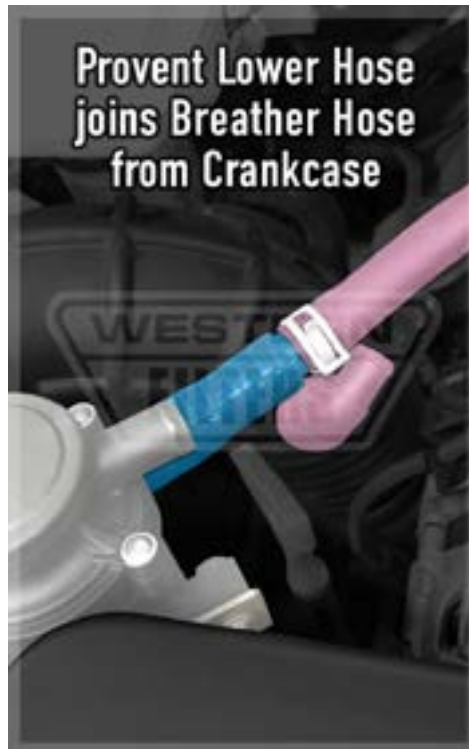

**STEP 8:**

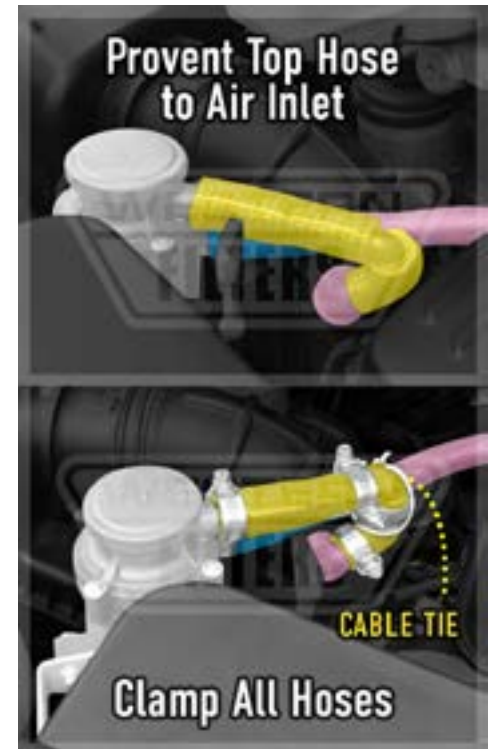

**STEP 9:**