

**MANN Provent Oil Catch Can Kit for Hyundai iLoad 2014-on 2.5L 4Cyl. Turbo Diesel DOHC I6V**

**KIT No: OS-PROV-35**



## Mann Provent IOO Catch Can Kit Install Guide

- STEP 1:** Ensure Engine is OFF - and cool enough to work on
- STEP 2:** Identify Install Area - find on Driver's side of engine bay
- STEP 3:** Attach Drain Hose - clamp on
- STEP 4:** Bolt Provent 100 to Prov Bracket - bolts and washers supplied
- STEP 5:** Feed Drain Hose down through engine bay
  - Secure Hose with Cable Tie
  - Ensure Drain Tap is in Closed position




**STEP 2:**



**STEP 3:**



**STEP 4:**

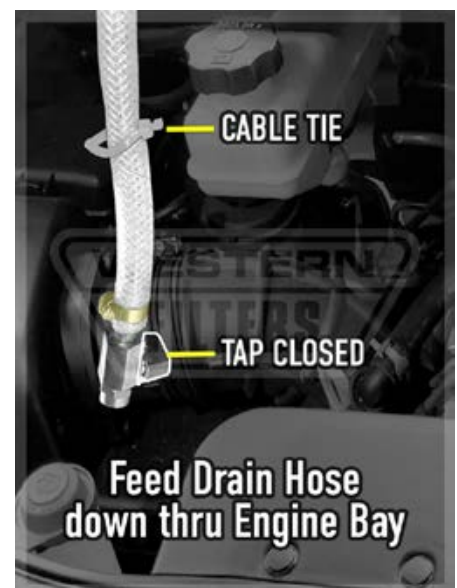

**STEP 5:**

**MANN Provent Oil Catch Can Kit for Hyundai iLoad 2014-on 2.5L 4Cyl. Turbo Diesel DOHC I6V**

**KIT No: 05-PROV-35**

**STEP 6:** Release OEM Nut

- :: Slide Prov Bracket in to place
- :: Return OEM nut & re-tighten

**STEP 7:** Provent 100 bolted in place

- :: OEM bolt fixes Prov Bracket

**STEP 8:** Release Breather Hose

- :: Release the Breather Hose Clip and separate from Air Intake

**STEP 9:** Attach Provent Lower Hose

- :: Attach Provent Lower Inlet Hose to the Crank Case Outlet Hose

**STEP 10:** Attach Provent Top Hose

- :: Attach Prov Top Outlet Hose to Air Intake
- :: Clamp all Hose connections !
- :: Cable tie Hoses together

To View the Install Slide Presentation:  
[SCAN QR-CODE on page 1](#)



**STEP 6:**




**STEP 7:**



**STEP 8:**



**STEP 9:**

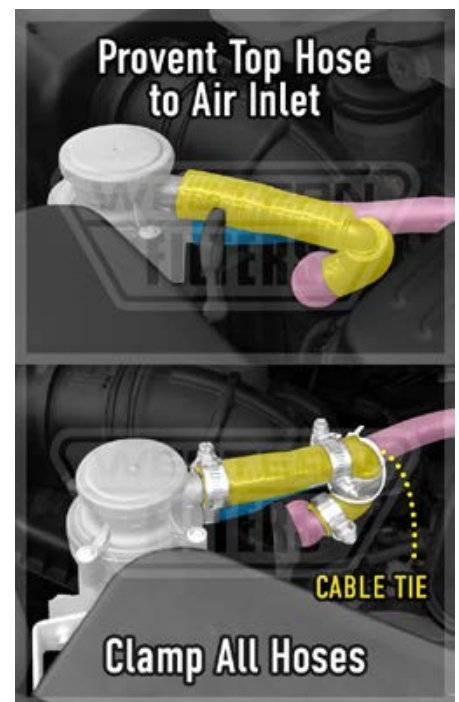

**STEP 10:**