

Ford Ranger PX3 Raptor XLT 2.0L 2018-on Bi Turbo Diesel EcoBlue

OS-PROV-36

WARNING: Engine damage will occur if incorrectly connected. Please follow Installation Guide
For vehicles that have travelled over 80,000 kms we recommend an intake manifold clean !


MANN Provent 200 IV Oil Catch Can Kit Install Guide

CAUTION: ** Ensure the engine is OFF & COOL before installation ! **

- STEP 1:** Identify Install Area - passenger's side of engine bay
 - STEP 2:** Remove OEM Breather Pipe
 - STEP 3:** Bolt Provent 200 to Prov Bracket - use OEM fittings
 - STEP 4:** Position Provent Outlet
 - Attach Drain Hose - secure with clamp
 - Feed Drain Hose down through engine bay
 - Secure Hose with Cable-tie
- *** Ensure Drain Tap is in CLOSED / OFF position *****



STEP 1:

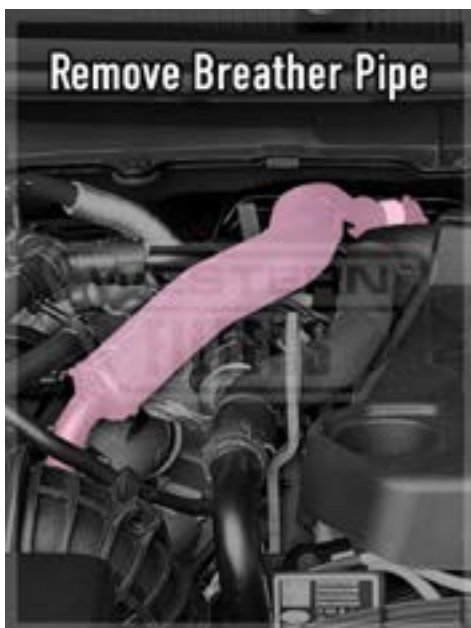

STEP 2:



STEP 3:



STEP 4:

STEP 5: Provent Top Inlet Hose

- Attach Shorter Hose
- Clamp & tighten

STEP 6: Top Hose to Crank Case

- Clamp & tighten

STEP 7: Provent Lower Outlet Hose

- Attach Longer Hose
- Clamp & tighten

STEP 8: Lower Hose to Air Intake

- Clamp & tighten

STEP 9: Cable-tie Hoses together

All Done !!

View the Install Slide Presentation:

[SCAN QR-CODE on page 1](#)




STEP 5:



STEP 6:



STEP 7:

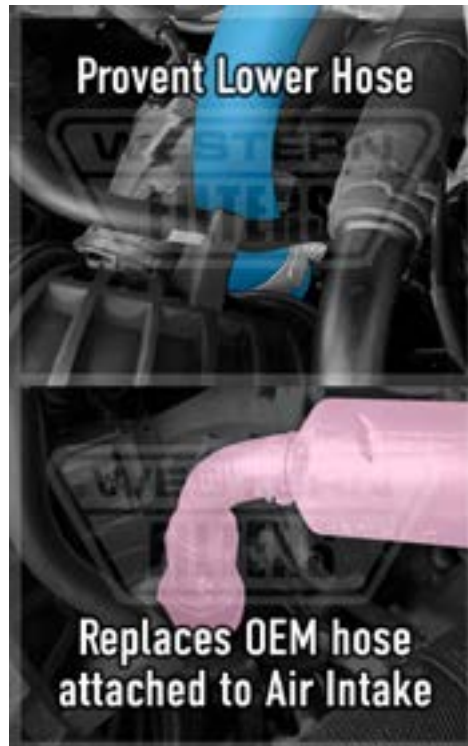

STEP 8:



STEP 9: