

SUBARU Forester SJ 2013-2018 2.0L Diesel 6MT

OS-PROV-43

WARNING: Engine damage will occur if incorrectly connected. Please follow Installation Guide
For vehicles that have travelled over 80,000 kms we recommend an intake manifold clean !

MANN Provent 200 IV Oil Catch Can Kit Install Guide

CAUTION: ** Ensure the engine is OFF & COOL before installation ! **

- STEP 1:** Locate the Install Area (driver's side). Remove engine cover.
- STEP 2:** Identify & Re-Use the Factory Fittings to secure the Provent Bracket
Push the indicated Pink Hose behind the Bracket location
- STEP 3:** Swivel Provent within it's plastic bracket to the correct Port Position
Clamp Drain Hose to the base of Provent unit.
**** Ensure Drain TAP IS CLOSED ****
Feed Drain Hose down through the eng.Bay into the Wheel Arch
Cable-Tie Drain Hose to secure.
- STEP 4:** Using supplied fittings, secure the Provent to WF Bracket



STEP 1:



STEP 2:



STEP 3:



STEP 4:

45-47 Forge St, Blacktown NSW 2148 | MON to FRI: 7:30am-5:00pm | SAT: 7:30am-12:00pm

SUBARU Forester SJ 2013-2018 2.0L Diesel 6MT

OS-PROV-43

STEP 5: Remove the end of the OEM Breather Hose from the Air Intake.
Insert a 90° Bend in to both ends of the supplied Short Hose.



STEP 6: Push one end in to the OEM Breather Hose

STEP 7: Fit the Lower Hose from Provent's Lower Outlet to the Air Inlet
Secure with hose clamps

STEP 8: Fit the Top Hose from Provent Top Inlet to Breather Hose
Connect to Short Hose+Fittings
Secure with hose clamps
Cable Tie hoses to prevent rubbing
**** Trim Engine Cover to ensure clearance of Provent ****
Return the Engine Cover and you're done !

NOTE: Once installed, for observational servicing purposes such as filter replacement, you can easily unscrew & remove the Top Lid of the Provent.

View the Install Slide Presentation: [SCAN QR-CODE on page 1 >](#)




STEP 5:



STEP 6:



STEP 7:

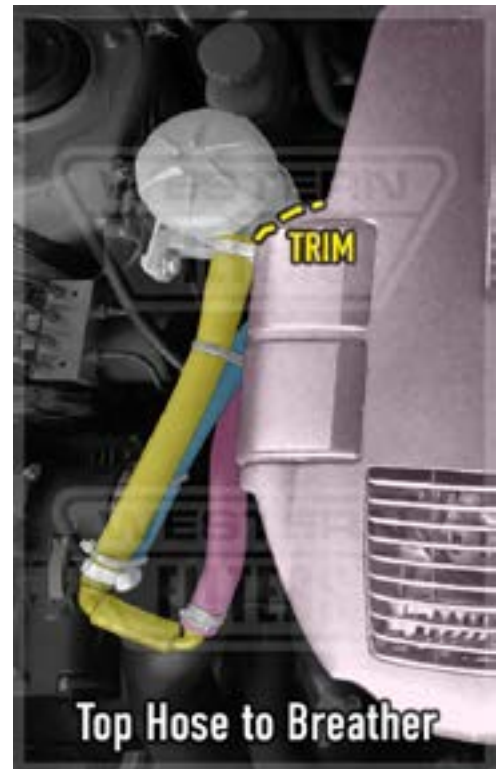

STEP 8: