

Isuzu D-Max / Mazda BT50 aug2020-on 3.0L TD 4JJ3 140kW

OS-PROV-44



MANN Provent 200 IV Oil Catch Can Kit Install Guide

CAUTION: ** Ensure the engine is OFF & COOL before installation ! **

- STEP 1:** Identify Install Area - drivers side of engine bay.
- STEP 2:** Before attaching Provent to bracket:
 - Swivel Provent Inlet in to Position
 - Attach Drain hose - to the base of the Provent
- STEP 3:** Identify Fixing Point (**NOTE:** re-use the factory OEM fittings).
- STEP 4:** Fit Provent to Bracket and then bolt the Bracket in to place
 - Feed Drain Hose down through the engine bay
 - Secure with hose clamp and cable ties.
 (Photo of Drain Hose secured - over page)




STEP 1:



STEP 2:



STEP 3:

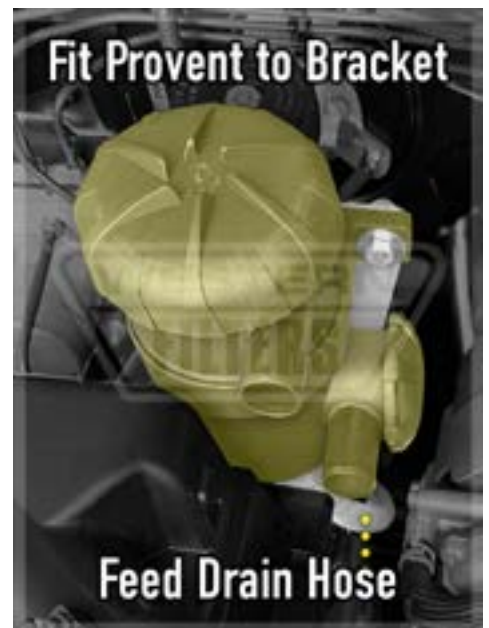

STEP 4:

Isuzu D-Max / Mazda BT50 aug2020-on 3.0L TD 4JJ3 140kW

OS-PROV-44

STEP 5: Remove OEM Air Hose between Crankcase and Air Intake

STEP 6: Connect the Double-Bend Hose from the Provent Lower Outlet to the Air Intake. Secure with Clamps.

STEP 7: Connect the Longer Single-Bend Hose' from the Provent Top Inlet to the Crankcase Outlet. Secure with Clamps.

STEP 8: Cable tie hoses where necessary. Dust off. Job done !

View the Install Slide Presentation: [SCAN QR-CODE on page 1 >](#)

Drain Hose Secured



STEP 4:

STEP 5a:

BEFORE

OEM Air Hose

OEM Hose Removed

AFTER

STEP 5b:

STEP 6a:

Provent Lower Outlet

To Air Intake

STEP 6b:

STEP 7a:

Provent Top Inlet

Crank Case Outlet

STEP 7b:

STEP 9:

Kit Installed