

Toyota LC Prado 2019-on 2.8L TD GDJ150 GDJ151 1GDFTV

OS-PROV-45




MANN Provent 200 IV Oil Catch Can Kit Install Guide

CAUTION: ** Ensure the engine is OFF & COOL before installation ! **

- STEP 1:** Identify Install Area (driver's side). Remove engine cover.
- STEP 2:** Identify fixing points
 - Top Fixing Point: use supplied M6 Bolt & Washer to fit
 - Lower Fixing Point: use supplied M8 Washer & Nut.
- STEP 3:** Swivel Provent ports in to displayed position. Fit Drain Hose to the base of the Provent Unit - Tighten the hose clamp.
- STEP 4:** Feed Drain Hose down thru eng.Bay and fix within the wheel arch.
 - *** Ensure Drain TAP is CLOSED *****




STEP 1:

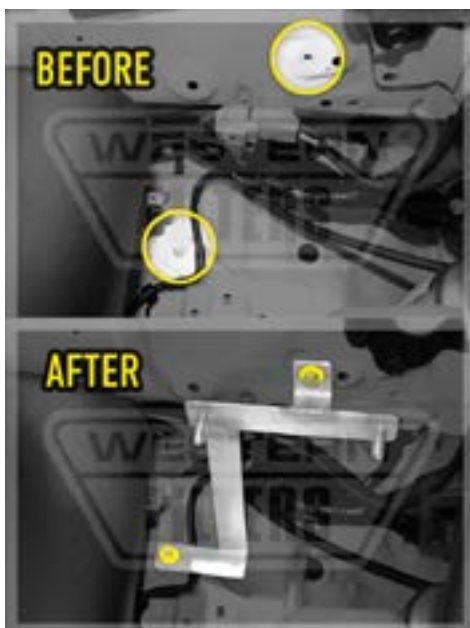

STEP 2:



STEP 3:

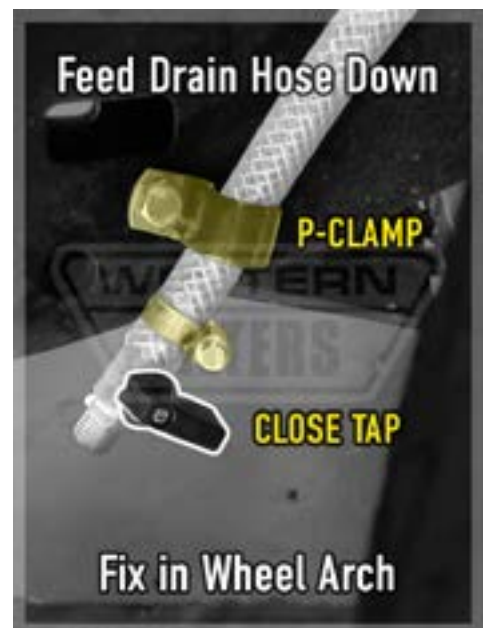

STEP 4:

Toyota LC Prado 2019-on 2.8L TD GDJ150 GDJ151 1GDFTV

OS-PROV-45

STEP 5: Fit the Provent 200 Unit to the Bracket using the supplied M8 Bolts & Washers.

STEP 6: Disconnect the End of the Factory Breather Hose which connects to the Crankcase Top Outlet.

STEP 7: Connect the articulated bent Short Hose to Provent's Lower Outlet. Join the other end to the Breather Hose from the Air Intake (re-using the OEM Factory Clamp).
- Secure with supplied clamps.

STEP 8: Connect the supplied Long Hose to Provent's Top Inlet. Connect the other end to the Crank Case Outlet.
- Secure with supplied clamps.

STEP 9: Return Engine Cover. Remove Tools from Engine Bay
Your done !

Watch Install Slide Presentation: [SCAN QR-CODE on page 1](#)




STEP 5:



STEP 6:



STEP 7:

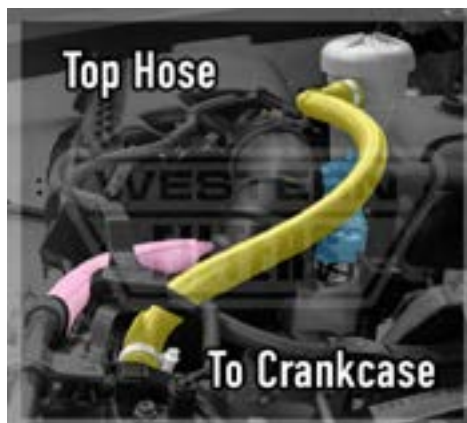

STEP 8:



STEP 9: