

MANN Provent Oil Catch Can Kit for Toyota LC Prado 2019-on 2.8L TD GDJ150 GDJ151 IGDFTV

Kit No: OS-PROV-45




Mann Provent 200 Catch Can Kit Install Guide

- STEP 1:** Switch off engine, remove the keys from the ignition.
Ensure engine is cool enough to work in the engine bay.
Remove engine's plastic cover, pulling up to unclip.
- STEP 2:** Identify Install Area (driver side of engine bay)
- STEP 3:** Identify fixing points
- Top Fixing Point: use supplied M6 Bolt & Washer to fit
- Lower Fixing Point: use supplied M8 Washer & Nut.
- STEP 4:** Swivel Provent ports in to displayed position. Fit Drain Hose to the base of the Provent Unit - Tighten the hose clamp.
- STEP 5:** Feed Drain Hose down thru eng.Bay and fix within the wheel arch.

*** Ensure Drain TAP is CLOSED ***




STEP 2:

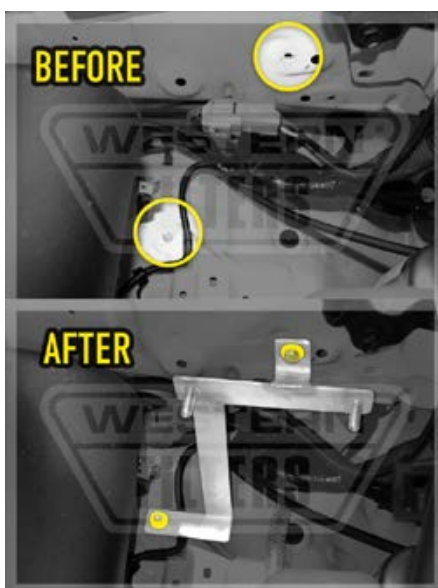

STEP 3:



STEP 4:

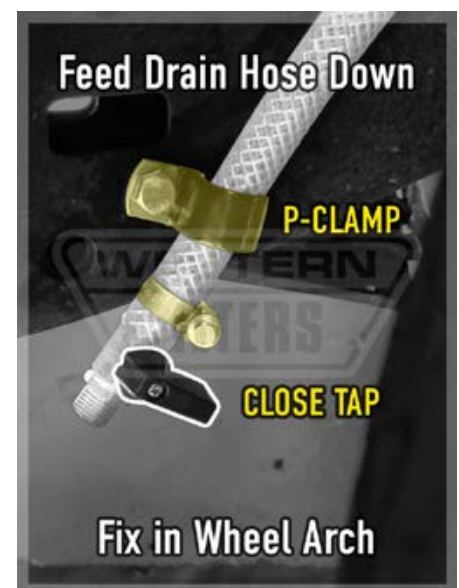

STEP 5:

45-47 Forge St, Blacktown. NSW 2148 | MON to FRI: 7:30am-5:00pm | SAT: 7:30am-12:00pm

Follow us on



westernfilters1

MANN Provent Oil Catch Can Kit for Toyota LC Prado 2019-on 2.8L TD GDJ150 GDJ151 IGDFTV**Kit No: OS-PROV-45**

STEP 6: Fit the Provent 200 Unit to the Bracket using the supplied M8 Bolts & Washers.



STEP 7: Disconnect the End of the Factory Breather Hose which connects to the Crankcase Top Outlet.

STEP 8: Connect the articulated bent Short Hose to Provent's Lower Outlet.
Join the other end to the Breather Hose from the Air Intake (re-using the OEM Factory Clamp).
- Secure with supplied clamps.

STEP 9: Connect the supplied Long Hose to Provent's Top Inlet.
Connect the other end to the Crank Case Outlet.
- Secure with supplied clamps.

STEP 10: Return Engine Cover. Remove Tools from Engine Bay
Your done !

VIDEO: Watch Install Slide Presentation: [SCAN QR-CODE on page 1](#)

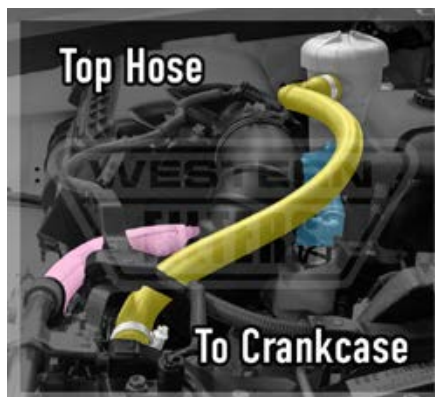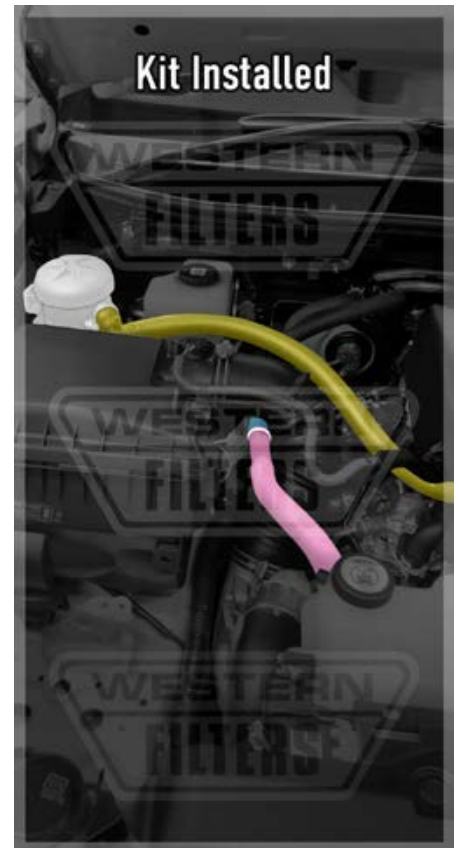**STEP 6:****STEP 7:****STEP 8:****STEP 9:****STEP 10:**