WESTERN FILTERS
T: (02) 9831 1715

WESTERN FILTERS

FILTERS, FILTER CLEANING & MORE

www.westernfilters.net.au | enquiries@westernfilters.com.au

Parker RACOR FUELMANAGER

LDV T60 2.8L GTV Turbo Diesel 10/2017-on 4Cyl.CRD DOHC 16V OS-FM-31

Use this guide to assist in the installation of the Western Filters Fuel Manager Pre-Filter Kit with our Vehicle Specific Bracket.

Notes: ** Ensure ENGINE is OFF and is COOL to touch ! **
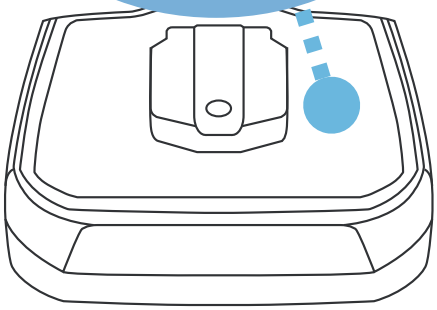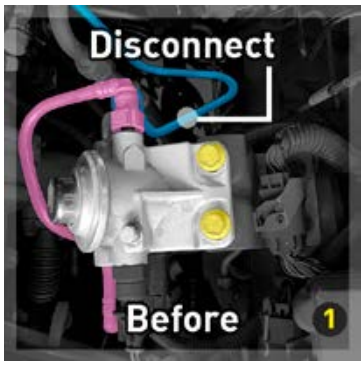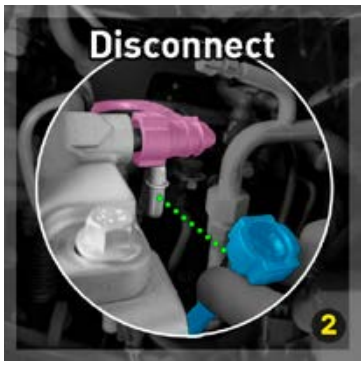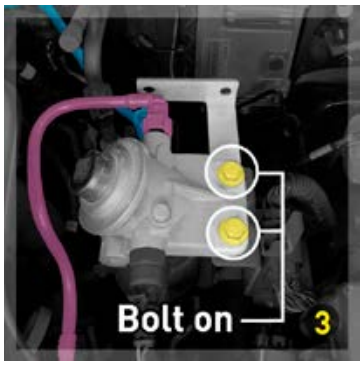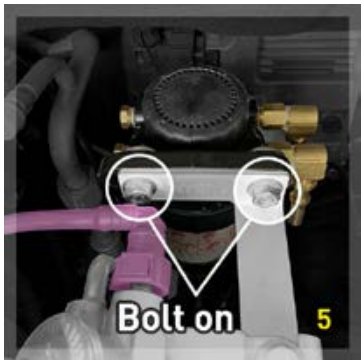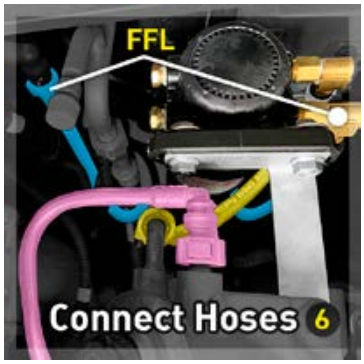
1. Identify installation area with existing Factory Filter (img1.)
2. Disconnect the Fuel Feed Line (FFL) from the Factory Filter (img.2)
3. Using existing bolts, mount bracket to factory filter unit (img.3)
4. Configure Head Assembly with proper fittings using supplied sealant. Allow 5mins to dry (img4).
5. Mount unit to bracket (img.5)
6. Connect the FFL (coloured blue) to the Pre Filter Inlet & Tank (img.6)
7. Connect the Kit Hose (coloured gold) to the FM Pre Filter's Outlet, and the other end to the Factory Fuel Inlet (img.6&7)
8. Turn ignition ON / OFF without starting the car - several times, to prime the fuel filter and then start the engine.